

INDEX

Phonebook	7
Message	7
Settings	8
Camera	9
Radio	9
Bluetooth	10

TO ENSURE SAFE AND PROPER USE

Please read these guidelines to avoid an illegal or dangerous use.
For additional information please read the user manual.



Safe turning on of the device

Do not turn on the device when use of same is not allowed or when its use may cause interferences or danger situations.



Safety on traffic on top

Please obey local regulations, drive with both hands and strictly re-spect road safety.



Interferences

All wireless devices may have work improperly, owing to interferences.



Turning off when in hospital

Please obey the restriction rules and turn off the device near hospitals.



Turning off when on flight

Please obey the relevant rules and restrictions; any interference caused by a wireless device may be dangerous.



Turning off in service areas

Turn off wireless devices in gas station, or near chemical or inflammable stuff.



Qualified service

Only qualified staff is recommended for device installation and maintenance.



Accessories and batteries

Use only approved accessories and batteries, always use compatible devices.



Impermeability

This kind of device is not water-proof. You should keep it in dry places.



Get a copy

Remember to save one copy of any important data memorized in your device, for fear they may get lost due to unpredictable reasons.



Emergency call

Make sure network is available and the “call” feature is activated; when some network features are active, emergency call might be unavailable. So please deactivate these functions and dial the emergency number once again.

CAUTION: Lithium battery. Risk of explosion if the battery is replaced by an incorrect type.

INTRODUCTION

Password

with the phone password, you can prevent others from using your mobile phone without your approval.

Insert the SIM card and the battery

Ensure to turn off the equipment and disconnect with the charger before taking out the battery

Startup and shutdown

Press the key of power supply to start up or shut down the mobile phone.

If it is prompted to input PIN or UPIN, please input the required password

Antenna

Your mobile phone may be provided with built-in and exposed antenna. Just like using any other radio transmitting devices, don't touch the antenna if not necessary because it may affect the quality of telecommunication and result in equipment operating in an energy level higher than required, this shortening the service life of the battery.

INPUT METHODS

Need to be sure to change one of input methods.

PHONEBOOK

You may save the information of contacts including names and telephone numbers in the phonebook. The storable entries of SIM card depend on the type of the card.

MESSAGE

The phone supports sending of and receiving of SMS. You may check the quantities of sent and received messages from the menu of sms counter.

Write message

You may select to send the finished message from SIM card 1 or SIM card 2. You may select multiple receivers to send the message to more than 1 person.

SMS setting

You may select to edit the SMS setting either of SIM card 1 or 2, where, you can edit the number of the service center (which is obtained from the service provider).

SETTINGS

Restore the factory settings

Enter the correct password of the phone will have to change your phone settings back to factory default state value

Network setting

The option is related to your network provider. Please get in contact with the network provider for that.

Flight mode

No communication function is available in flight mode

Switch mode

You may select modes of dual-standby and single-pass, SIM 1 on SIM 2 on and flight mode.

WAP

You may surf on line with WAP browser, wich means that you may surf on line at any time and in any place. For details, please get in contact with the nearest network service provider.

VIDEO RECORDER

In the options of the video camera, you may set the exposure compensation, avoidance of flickering, white balance. special effect, profile and etc.

CAMERA

In the option of camera, you may set the photometry mode and etc. You may enter the album to check the formats that the cell phone supports.

AUDIO PLAYER

The music player is used to play music files in supported formats in the current player's list.

VIDEO PLAYER/IMAGE VIEWER

Check the video or pictures files supported by the phone.

CALL HISTORY

The call list, lists all types of call, including missed ones, dialed ones and answered ones or you may enter the separate lists of missed calls, dialed calls and answered call for check or operation.

FM RADIO

Turn on FM broadcast and you may manually tune the channel

RECORDER

Use this function you can record or listento your own record.

GAMES

This mobile phone provides a snake game, please see the specific operation within the game operating instructions

CONNECTION

Edit and set the GPRS access point.

Note: the account data is to be provided by the network operator

ALARM

Set the time of alarm clock. At the time of alarm clock, an alarm ring will be given as per the setting.

BLUETOOTH

You may establish wireless connection with other compatible devices with the Bluetooth technology.

LAMP - CALENDAR - CALCULATOR

This phone support lamp function, calendar and calculator.



MANUFACTURER'S LIMITED WARRANTY

This warranty does not limit the rights granted to consumers by specific national rules on consumer goods. The period of time during which this warranty is valid is limited to 24 months starting from the first date of purchase of the product. If it is used for professional purposes, the period is reduced to 12 months. During the warranty period, the national distributor Easyteck indicated at the bottom of this certificate, will, at its own expense and within a reasonable time, remove any interferences that may be encountered, and caused by manufacturing defects. Except as required by applicable law, the defects found by assistance personnel will be resolved by repair or, at the discretion Easyteck, through the replacement of the Product.

This limited warranty is only valid in the European country for which the product is intended and is the sole responsibility of the national distributor of reference for that country and which is identified in the bottom of the certificate. Some limitations in assistance services covered by this warranty may arise from the presence of specific components for a country.

Warranty referred to accessories and spare parts contained in the package

The package for the product covered by this warranty may contain accessories or spare parts that have a different warranty period since they are consumables, the warranty periods are summarized as follows:

- 24 months for cell phones

- 12 months for non-consumable accessories
- 6 months for batteries, headsets, memory cards or other.

The following are not covered by the warranty:

- The manuals and/or packaging
- User contents, configurations downloaded into the product or third party software
- Costs related to shipping the product to and from an authorized service center
- Deterioration caused by normal wear and tear including batteries
- Breakage due to accidental causes or inexperience and all damages caused by any external agent.
- Damage caused by improper use as described in the manual supplied with the product.
- All failures caused by use of non-original accessories, by viruses, or by connections to computers and networks.
- All defects caused by exposure to moisture and/or steam, from use under extreme thermal or environmental conditions or in the presence of corrosion, oxidation, food, liquid or chemical spills.

Limits of Liability:

The SIM card that is required to use the phone is provided by the phone operator and is therefore excluded from the warranty.

-This warranty is the protection given to the consumer by Easyteck through the reference dealer and is not intended to limit guarantees to the consumer which the retailer must ensure in accordance with the laws of the different countries.

- This warranty will be honored only and exclusively at authorized service centers or at retailers that are responsible for selling Easyteck brand products.
- The terms of the Guarantee shall not be extended under any circumstances and will be effective only from the date the product is first sold to the final consumer, as certified by a valid receipt.
- The faulty parts replaced during repairs under warranty are the sole property of Easyteck and cannot be demanded by the consumer in any way.
- To the extent permitted by applicable law and in the absence of fraud, no liability is attributable to Easyteck for damages due to loss of user data caused by any defect covered by the warranty.
- The consumer, to be able to obtain the repair, must always deliver the product to the authorized service center at his own expense, devoid of any lock or security code that limits or prevents use.
- Loss of profit, losses caused by non-use of the product or loss of revenues for any direct, indirect, special or consequential damages are also excluded from the liability.
- The responsibility of Easyteck is always limited to the purchase value of the product and the consumer is always responsible for keeping a copy of the personal data and software stored in the phone's memory.
- For faults which, for the reasons listed above, are not attributable to the terms of this warranty the consumer who does not want to have the repair carried out, will be required to pay the corresponding amount requested by the service center. Easyteck shall in no way be held responsible for this request because it is not under warranty.

CAUTION: The warranty is not valid if any attempts have been made to open or tamper with the product, including remove and/or obliterate labels and/or the IMEI code of the product.

Product sold in the European community
 Manufactured by Fonex S.p.A. via dell'artigianato 2/4 Sant'Albano Stura (CN)
 MADE IN CHINA

C € 0700



to avoid possible hearing damage, limit the amount of time listening at high volumes

Stamp and signature of dealer

Date of purchase



INFORMATION FOR USERS

pursuant to Legislative Decree No. 49 of March 14, 2014

“Implementation of Directive 2012/19 / EU on Waste Electrical and Electronic Equipment (WEEE)”

This wheeled bin symbol on the product indicates that at the end of its life must be collected separately from other waste. The user must, therefore, take the remote control integrates the essential components that got to its life to the appropriate differentiated collection centers for electronic and electro-technical waste, or return it to the dealer when purchasing a new appliance of equivalent type, in terms of one to one, or one to zero for equipment having longer side of less than 25 cm. Appropriate separate collection for the decommissioned equipment for recycling, processing and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. Illegal dumping of the product by the user entails the application of administrative sanctions stated in Legislative Decree n. Legislative Decree No. 49 of March 14, 2014.



Your product contains batteries covered by the European Directive 2013/56/EU, and that can not be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environment and health.

The battery is incorporated, to be disposed at the end of the useful life of the product, it can not be removed by the user. In this case, recycling or recovery centers handle the dismantling of the product and remove the battery.

READ CAREFULLY AND KEEP THE INFORMATION FOR FUTURE REFERENCE

Declaration of conformity Directive R&TTE 1999/5/EC

The company FONEX SPA declares that the product B100 complies with the essential requirements of the R&TTE 1999/5/EC

The declaration of conformity in complete form is available at the headquarters of FONEX SPA via dell'Artigianato 2/4 - 12040 - Sant'Albano Stura (CN)