

INDEX

Product overview	6
Description of function	7
Message	9
SMS setting	11
Settings	14
Security settings	15
Multimedia	16
FM radio	19
Tools	20
Bluetooth	21

TO ENSURE SAFE AND PROPER USE

Please read these guidelines to avoid an illegal or dangerous use.
For additional information please read the user manual.



Safe turning on of the device

Do not turn on the device when use of same is not allowed or when its use may cause interferences or danger situations.



Safety on traffic on top

Please obey local regulations, drive with both hands and strictly re-spect road safety.



Interferences

All wireless devices may have work improperly, owing to interferences.



Turning off when in hospital

Please obey the restriction rules and turn off the device near hospitals.



Turning off when on flight

Please obey the relevant rules and restrictions; any interference caused by a wireless device may be dangerous.



Turning off in service areas

Turn off wireless devices in gas station, or near chemical or inflammable stuff.



Qualified service

Only qualified staff is recommended for device installation and maintenance.



Accessories and batteries

Use only approved accessories and batteries, always use compatible devices.



Impermeability

This kind of device is not water-proof. You should keep it in dry places.



Get a copy


Remember to save one copy of any important data memorized in your device, for fear they may get lost due to unpredictable reasons.



Emergency call

Make sure network is available and the “call” feature is activated; when some network features are active, emergency call might be unavailable. So please deactivate these functions and dial the emergency number once again.

Product overview

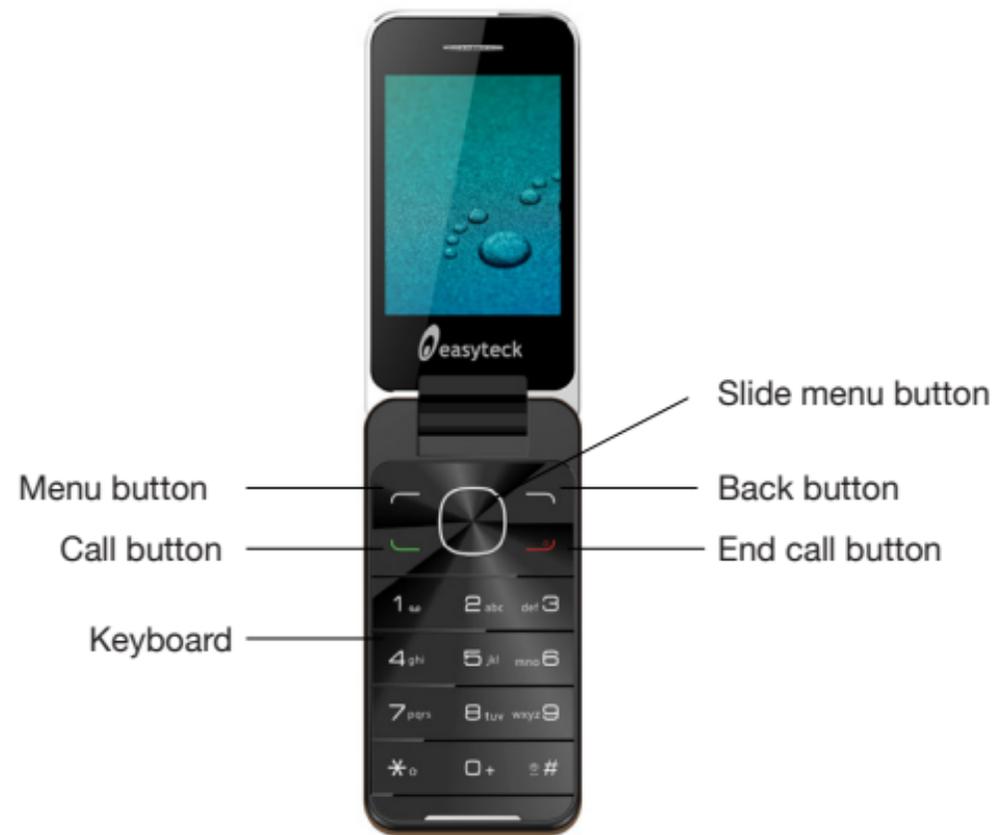

Battery

The battery in original state has about 50% electricity quantity and you can use it after unpacking. It performs best after full charge/discharge for the first three times.

Description of functions

Contacts

You can use the Contacts features business card information will be stored to mobile phones.

Quick search

Enter the name of the first letter in the contacts to find qualified records.

New

In the options, add a telephone number to phone or SIM card.

Delete multiple

choose to delete phone numbers from SIM or Phone, you can mark all of the phone numbers then choose "OK" to delete . you can also choose to delete them one by one.

Import/Export

Copy

Copy contacts from phone/SIM card to SIM card/phone.

Import contacts

Import contacts file from phone or memory card to Contacts.

Export contacts

Choose some phone numbers in contacts then export them to phone or memory card.

Others

Own number

To edit the name and the number of your SIM card.

Service number

Support the steps for reaching actual people to solve your problem.

Memory status

To view the capacity of SIM card and phone.

Groups

You can view and edit the details of the group and members of the group to remove or add operation.

Your phone provides the following selections for your option:

Family/Friends/Business/Classmates

New group

Add a new group

Mass texting

Send SMS to many phone numbers that you select from Contacts.

Message

Write message

You could write new message by using this function. When you input the message to be sent, press left soft key to send, to insert the templates, to add contact person information , to add phiz and to save, etc. Within the write message menu you can write and edit text message up to 160 characters.

Inbox

After you have an incoming text message .The phone stores the message in the inbox folder of the SMS menu.

Outbox

When you fail to send a message. The phone stores the message in the outbox folder.

Sentbox

When you send a message successfully.The phone stores the message in the sentbox folder.

Drafts

When you save a message you have written.The phone stores the message in the drafts folder.

Security inbox

you can move a message from inbox ,outbox,drafts,sentbox to security inbox.

To enter the security inbox,you should input the security inbox password.

Templates

Your phone offers you a list of templates that you can use in replying to messages. You can also use templates when writing messages.

Broadcast message

Send or receive message to same area subscribers in Broadcast Message mode. You also can turn this function on/off here.

Receive mode -> ON/OFF broadcasting function.

Language -> Turn On/Off all languages.

Channel Setting -> Set Broadcasting Message parameter.

Voice mail server

Line 1 number /Fax number/Data number

SMS Settings

SIM1 message center/SIM2 message center:to show your text message center.

Message validity period:6 hours/24 hours/72 hours/1 week/maximum

Status report:You can request the network to send status reports on your text message(network service).A status report is indicated by in front of the message header.

Save sent message:prompt user/save/don't save

Preferred storage:phone/SIM

Message capacity

to view the SMS memory of SIM card and phone.

Call logs**Missed calls**

In Call logs menu, choose Missed calls and press “OK key” to view the records.

Your phone provides the option to Recent Contacts with the same.

Dialed number

In Call logs menu, choose Dialed number and press “OK key” to view the records.

Your phone provides the option to Recent Contacts with the same.

Received calls

In Call logs menu, choose Received calls and press “OK key” to view the records.

Your phone provides the option to Recent Contacts with the same.

Rejected calls

In Call logs menu, choose Rejected calls and press “OK key” to view the records.

Delete call

Your phone allows you to delete all of call logs.

Call timers

Your phone allows you to view the timers for calls made and received.

In Call logs menu, choose Call timers, press “OK key” to view the content.

- Last Call: List out the last call time of your conversation
- Received calls: Sum of total call time you have received.
- Dialed calls: Sum of total call time you have dialed.
- Reset All: Reset the time counter to zero.

Settings

Call Settings

Your phone provides the following selections for your option:

Dual-SIM: Standby mode/Reply by original SIM/Set SIM name

Call divert: call forwarding unconditional/call forwarding on busy/call forwarding on no reply/divert if unreachable/cancel all diverts

Call waiting: Activate/Deactivate/Query Status.

Call barring: All outgoing calls/All incoming calls/Incoming calls when roaming/ISD calling/

Dial when INTL roaming/cancel all barring/change password

Hide ID: Hide ID/Display own ID/Display ID by network

Other: IP prefix/Call time reminder/Auto redial/Vibration when connected

/Reply SMS after reject/Auto record voice call

Phone settings

Into the phone set up sub-menu, you can set the following:

Date and time: At the time and date menu, you can set the time, date.

Language setting: Includes languages type.

Shortcut settings: to define the shortcut functions .

Auto power on/off: In this menu, you can set the timer switch machine.

Restore factory settings: input password to restore factory settings.

Display

Wallpaper settings/Idle display settings/Contrast/keypad backlight/auto keypad lock

Security settings

Your phone provides the following selections for your option:

PIN: on/off/Modify PIN

Modify PIN2: to modify PIN2 number

Phone locked: on/off

Modify the cellphone password

Privacy : to choose the functions that you need to enter password when entering.

Lock screen by end-key: to lock screen by end-key.

Guardlock: status/change password

Fixed dialing: fixed dialing/Fixed dialing number

Black list: blacklist list/blacklist settings

Connections

Network selection:Auto select/Manual select

Multimedia

Camera

The camera lens is on the top of the phone, and the display of the phone works as a viewfinder. If there's not enough memory for camera, you need to delete old photos to free some spaces for new photos or you can choose to save photos in memory card. The status of your camera setting will be displayed on the top of preview mode.

Store photos

You can review pictures you have taken by pressing OK

DV mode Switch to DV mode

Effect: Set photo color

Settings Size: Set photo size

Quality: Set photo quality

Banding: To avoid flashing

Shutter sound:activate/off

Auto save:activate/off

Storage:phone/memory card

DV

You can record the video clip through build-in camera.The status of your video recorder setting will be displayed on the top of preview mode.To start using Video recorder in Multimedia menu, select Video recorder and press "OK key" Press Options to personalize your camera setting.

Audio/Music

Key Audio Play Function

Press can play or pause MP3

Short press can choose the previous and next MP3, long press can fast back or fast forward.

Note: You can adjust this volume +/- through scrolling up/down key.

Music list: to list the musics of your phone and memory card.

Add: to saved play list/to new play list

Set as ringtone: set as incoming call ringtone/set as alarm ringtone

Shuffle: whether to shuffle play

Repeat: to set the play mode,off/repeat all/repeat one

Settings: Equalizer/BT stereo output/BT stereo headset

Open review: to review MP3

Video

Key Video Play Function

Press can play or pause video

Short press can choose the previous and next MP3, long press can fast back or fast forward.

Note: You can adjust this volume +/- through scrolling right/left key. Press 5 key to adjust brightness.

Play: Allows you to play the video saved in the My stuff.

Local play list: list the video files of phone and memory card.

Shuffle: whether to shuffle play

Repeat: to set the play mode,off/repeat all/repeat one

Settings: Local video play mode/settings reset/help

Details: to view the details of a video file

FM radio

You can listen to Fm radio freely. Enter the radio interface, search the frequency. (87.5-108.)

Auto search and save/Channel list/save/Manual search/close/open speaker/background play

- Auto search and save:Search frequency available automatically.

- Channel list: you can view all the broadcasting stations you saved.

- Save: save a channel to channel list.

- Manual search: search the broadcasting station by input frequency manually.

- Close/open speaker: you can start up loudspeaker to make the sound louder.

- Background play: you can do other operations while listening to the radio.

- Record: to record a channel.

- Timing record: to set the time of recording and the channel.

- Record file list: list the record file you have recorded.

Game

Inter and play games

Tools

Calculator

This function enables you to add, subtract, multiply and divide.

The screen will initially display the number “0”. Enter the first number to be calculated.

Alarm

To set a new alarm, alarm clock icon will be displayed when an alarm is active.

At the same time, three groups can be set up alarm clock.

Recorder

Profiles

Normal: Suitable for normal use.

Silent: Suitable for silent use.

Meeting: During the meeting, suitable for use.

Outdoor: Suitable for outdoor use

Indoor: Suitable for indoor use.

Calendar

To view the calendar.

Bluetooth

Your phone provides the following selections for your option:

Bluetooth/Bluetooth visibility/Paired device/Transferring files/device name/Bluetooth file storage/help

According to the menu, will enter the corresponding function set.

Internet

The service is provided by network operator. If SIM card or network operator fails to provide the service, the function can not be available. Contact network service operator, if you want to have more information.

TF card flash

This mobile phone supports T-flash card to extend the memory space. The operations are as follows:

Installing and removing T-flash card

Switch off the phone and take off the battery of it.

Insert or remove the T-Flash to the slot which has the sign of T-Flash directly.



MANUFACTURER'S LIMITED WARRANTY

This warranty does not limit the rights granted to consumers by specific national rules on consumer goods. The period of time during which this warranty is valid is limited to 24 months starting from the first date of purchase of the product. If it is used for professional purposes, the period is reduced to 12 months. During the warranty period, the national distributor Easyteck indicated at the bottom of this certificate, will, at its own expense and within a reasonable time, remove any interferences that may be encountered, and caused by manufacturing defects. Except as required by applicable law, the defects found by assistance personnel will be resolved by repair or, at the discretion Easyteck, through the replacement of the Product. This limited warranty is only valid in the European country for which the product is intended and is the sole responsibility of the national distributor of reference for that country and which is identified in the bottom of the certificate. Some limitations in assistance services covered by this warranty may arise from the presence of specific components for a country.

Warranty referred to accessories and spare parts contained in the package

The package for the product covered by this warranty may contain accessories or spare parts that have a different warranty period since they are consumables, the warranty periods are summarized as follows:

- 24 months for cell phones

- 12 months for non-consumable accessories
- 6 months for batteries, headsets, memory cards or other.

The following are not covered by the warranty:

- The manuals and/or packaging
- User contents, configurations downloaded into the product or third party software
- Costs related to shipping the product to and from an authorized service center
- Deterioration caused by normal wear and tear including batteries
- Breakage due to accidental causes or inexperience and all damages caused by any external agent.
- Damage caused by improper use as described in the manual supplied with the product.
- All failures caused by use of non-original accessories, by viruses, or by connections to computers and networks.
- All defects caused by exposure to moisture and/or steam, from use under extreme thermal or environmental conditions or in the presence of corrosion, oxidation, food, liquid or chemical spills.

Limits of Liability:

The SIM card that is required to use the phone is provided by the phone operator and is therefore excluded from the warranty.

- This warranty is the protection given to the consumer by Easyteck through the reference dealer and is not intended to limit guarantees to the consumer which the retailer must ensure in accordance with the laws of the different countries.

- This warranty will be honored only and exclusively at authorized service centers or at retailers that are responsible for selling Easyteck brand products.
- The terms of the Guarantee shall not be extended under any circumstances and will be effective only from the date the product is first sold to the final consumer, as certified by a valid receipt.
- The faulty parts replaced during repairs under warranty are the sole property of Easyteck and cannot be demanded by the consumer in any way.
- To the extent permitted by applicable law and in the absence of fraud, no liability is attributable to Easyteck for damages due to loss of user data caused by any defect covered by the warranty.
- The consumer, to be able to obtain the repair, must always deliver the product to the authorized service center at his own expense, devoid of any lock or security code that limits or prevents use.
- Loss of profit, losses caused by non-use of the product or loss of revenues for any direct, indirect, special or consequential damages are also excluded from the liability.
- The responsibility of Easyteck is always limited to the purchase value of the product and the consumer is always responsible for keeping a copy of the personal data and software stored in the phone's memory.
- For faults which, for the reasons listed above, are not attributable to the terms of this warranty the consumer who does not want to have the repair carried out, will be required to pay the corresponding amount requested by the service center. Easyteck shall in no way be held responsible for this request because it is not under warranty.

CAUTION: The warranty is not valid if any attempts have been made to open or tamper with the product, including remove and/or obliterate labels and/or the IMEI code of the product.

Distributor for Italy:

Fonex S.p.A. via dell'Artigianato 2/4 – 12040 – Sant'Albano Stura (CN)

Stamp and signature of dealer
Date of purchase





CORRECT DISPOSAL OF THE PRODUCT INFORMATION FOR USERS

pursuant to Article 13 of the Legislative Decree of 25 July 2005, No. 151 "Implementation of Directives 2002/95/EC, Directive 2002/96/EC and 2003/108/EC on restricting the use of hazardous substances in electrical and electronic equipment and the disposal of waste"

The symbol of the crossed-out dustbin shown on the equipment or on the packaging indicates that the product, at the end of its useful life, must be collected separately from other waste. The recycling of this equipment at the end of life is organized and managed by the manufacturer. The user who wishes to dispose of this equipment should contact the manufacturer and follow the system that it has adopted to allow for the separate collection of at end of life. Appropriate separate collection in order to send old equipment for compatible recycling, treatment and disposal helps to prevent potential negative effects on the environment and on health and promotes the reuse and/or recycling of the materials of which the equipment is composed.

Illegal disposal of the product by the owner will result in the application of administrative penalties provided by law.



CORRECT DISPOSAL OF PRODUCT BATTERY

(Applicable in THE European Union and other European countries with separate battery collection systems)

The marking on the battery or on documentation or packaging indicates that the battery in this product should not be disposed of with other household waste at the end of the life cycle.

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead in quantities above the levels referred to in the EU Directive 2006/66.

If the battery is not properly disposed of, these substances can cause harm to human health or the environment.

Declaration of conformity

We hereby declare that the product F200 has been tested by PHOENIX TESTLAB and has passed the standards required by EMC 1999/5/EC for the following specification:

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013, EN 50360:2001+A1:2012, EN 62209-1:2006, EN 62209-2:2010, EN 50566:2013+AC:2014, EN 62479:2010, EN 301 489-1 V1.9.2, EN 301 489-7 V1.3.1, EN 301 489-17 V2.2.1, EN 301 511 V9.0.2, EN 300 328 V1.8.1

Product sold in the European community