

GENERAL INTRODUCTION

This phone adopts the up-to-the-minute integrated circuit, with superior craftwork and stable capability. Please read the manual carefully for proper use.

SAFETY INSTRUCTION

When using your telephone, please follow these basic safety precautions to reduce the risk of fire, electric shock or injury to persons.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the products.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink or swimming pool).
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Never spill liquid of any kind on the product.
7. To reduce the risk of electric shock, do not disassemble this product. If service or repair work is required, contact your qualified technician.
8. Do not use the telephone to report a gas leak in the vicinity of the leak.

FUNCTIONS

Desk/wall mountable

Last number redial

Flash function

Pause function

OPERATION

1) Preparation

- 1.1 Connect the line plugs into phone line jack and the other plug to connect to the wall jack.
- 1.2 Insert the handset coil cord into the phone jack at the bottom.

2) Receiving

As it rings, pick up the handset from the cradle to receive, and put back the handset to hang up to end the conversation.

3) Dialing

Pick up the handset, dial the desired number as hearing the dialing tone, then if you hear the long tone like “do—do”, the line has got through. If you hear the short tone like “do... do... do”, busy tone, you could press the hook switch then press **REDIAL** to dial it out again after some time. You could repeat the above process till getting the line through.

4) Redial

Press the **REDIAL** button the unit will redial the last number automatically.

5) Pause

If you want to dial out the extension phone, press shift key (normally “0” or “9”) + **PAUSE** + desired number, then you could just press **REDIAL** to dial out when the dialed number is busy.

6) Wall Mountable

It can be used as wall-mounted, and it can also be used for desktop.

7) Flash

When you are in conversation, press **FLASH** key to end.

When you are inputting number keys, press **FLASH** key to end.

When the line is busy, press **FLASH** key and **RD** key to redial the last number.



MANUFACTURER WARRANTY LEGISLATION

This warranty does not limit the rights granted to consumers under specific national legislation for consumer goods. The period of time in which it is valid this warranty is limited to 24 months, starting from the first date of purchase. If this is used for professional purposes the period is reduced to 12 months. During the warranty period, the national distributor Easyteck indicated at the bottom of this certificate, will, at its own expense and within a reasonable time, to eliminate the breakdowns that were to be found and assigned to a manufacturing defect. Except as provided under applicable law, the defects identified by the appropriate staff for assistance will be resolved by repair or, at the sole discretion Easyteck by replacing the product. This limited warranty applies only in the European country where the product is intended and it is paid entirely by the national distributor reference in that country and which is indicated at the bottom of the certificate. Some limitations to the services covered by this warranty may result from the presence of specific components for a country.

Warranty related to the equipment and spare parts contained in the pack

In the package of the product under this warranty may be contained accessories or parts that have a different warranty period as evidenced by consumers. The warranty period are summarized as:

- **4 months** for the phone
- **12 months** for non-consumable accessories
- **6 months** for batteries, headsets, memory cards or other

Are not covered under warranty:

- Manuals and packaging
- The contents of the user configurations downloaded in the product or the third party software
- Costs related to product shipments to and from the authorized service center
- The deterioration due to normal wear and tear also including batteries
- The accidental or breakage due to inexperience and all damages caused by any external agent.
- All damages caused by any use not described in the manual accompanying the product.
- All failures caused by use of non-original accessories, from viruses or connections to computers and networks.
- All product defects caused by exposure to moisture and/or steam from use in environmental conditions or extreme temperature or in the presence of corrosion, oxidation, payment of food, liquid or chemicals.

Limits of Liability:

- This guarantee is the protection afforded to the consumer through the dealer from Easyteck reference and does not intend to restrict consumer safeguards put in place required by the dealer legislation of different countries.
- This guarantee will be granted solely and exclusively in the technical centers or from authorized dealers who treat the marketing of brand products Easyteck.
- The terms of guarantees are not extended in any way and shall be payable only from the date of first sale of the product to the consumer as a receipt for a valid certificate.
- Broken parts replaced during warranty repairs are the sole property Easyteck and can not be demanded by consumers in any way.
- The consumer who needs to repair the product should always pay the charges of the conveying to send the goods to the authorized facility, free of any lock or security code that restricts or impedes

the use.

- To the extent required by applicable law and in the absence of fraud, no liability is attributable to Easyteck for damage due to loss of user data caused by any defect covered under warranty.
- Are also excluded from responsibility in the loss of profits, losses due to the unused of the product or loss of revenue for any direct, indirect, special or consequential damages.
- The responsibility for Easyteck is always limited to the purchase value of the product and consumers should always keep copies and his treatment of the data and software program in memory of the phone.
- For faults which, for the reasons listed above, were not attributable to the terms of this warranty the consumer wishes to make no repairs will be required to pay the consideration of the budget requested by the service center.

Easyteck can not in any way be held responsible for this strange request because out from the protection guarantee

CAUTION: The warranty is valid if they aren't ever found on the product attempts to open or tampering of any kind including removal and/or deletion of labels and/or IMEI of the product.

Distributor for Italy: Fonex S.p.A. via dell'Artigianato 2/4 – 12040 – Sant'Albano Stura (CN)

Stamp and signature of dealer
Date of purchase: _____





CORRECT DISPOSAL OF THE PRODUCT

INFORMATION FOR USERS

In reference to the art.13 of the legislative decree 25th July 2005, n. 151 "Implementing directives 2002/95/CE,2002/96/CE, regarding the reduction of the use of the dangerous substances in the electric and electronic devices and the waste disposals"

The symbol of the crossed waste box on the device or on the packaging indicates that at the end of the life of the device, it must be thrown separately from the other waste.

The person who throws the device must put it in the particular waste box in which there are only electric and electronic waste or he must bring it to the retail to buy another similar device.

If everyone put the device in the precise waste box, it helps the environment, the health and the recycling of the materials can be done.

The illegal disposal of the product leads the application of the administrative sanctions provided by the existing standard.



CORRECT BATTERY DISPOSAL OF THE PRODUCT

The symbol of the crossed waste box put on the battery means that it must be thrown separately from the other waste at the end of its life.

If chemical symbols Hg,Cd o Pb are on the it label means that in the battery there are mercury, cadmium and lead with a superior level quantity determinated by the directive UE 2006/66.

So the battery must be correctly wasted as the substances inside can cause damages to the health and to the environment.

Declaration of conformity:

We hereby declare that this product G501 has been tested by BACL and passed the required for the following specifications:

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013

EN 55022:2010/AC:2011, EN 55024:2010

This product can be sold in European community