

TABLE OF CONTENTS

Safety Information	3	FM radio	15
Description of telephone	6	Alarm	16
First time use – inserting SIM card/SD card	7	Applications	16
Inserting/charging Battery	8	Settings	17
Turning the telephone on/off	8	Battery information and maintenance	21
Making/answering Calls	9	Emergency calls	23
Menu functions	9	Troubleshooting	23
Guide to data entry	9		
Messages	11		
Telephone book (contacts)	13		
Calls log	14		
Multimedia	14		

Before using the phone it is important to read these instructions carefully to ensure the safety of conscious use and in compliance with the laws.

For safe driving

When driving always use the headset and strictly observe the restrictions prescribed by law regarding the use of Cell phones. In some cases, the use of Cell phones within a particular car, could cause adverse effects on the electronic equipment installed. In these rare circumstances, it is advisable to keep the phone turned off. If the car is equipped with airbags never place the phone near the outlet because if activated the phone may be propelled with force and pose a serious danger to passengers.

On board aircraft

The phone may cause harmful interference with electronic equipment on the aircraft therefore it is necessary to scrupulously follow the instructions given by the crew regarding restrictions on the use of Cell phones during flights.

In the presence of flammable substances

Strictly observe all signs that restrict the use of Cell phones near flammable substances.

In the vicinity of explosive materials

Do not hold keep the phone turned nor use the phone in environments saturated with flammable vapors or in the presence or explosive materials.

It is always advisable to keep Cell phones switched off in hospitals and especially in the vicinity of electronic equipment that may be affected by the emission of electromagnetic waves.

Always scrupulously observe the laws and guidelines relating to restrictions of use.

Interferences

Cell phones may also interfere with all measuring instruments and especially those with high sensitivity such as pacemakers or other medical aids. Always check the warnings and restrictions on the use of Cell phones indicated in the instructions of the individual electro-medical devices.

Technical Assistance

Cell phones must be disassembled by authorized personnel only, since this requires professional skills in order to avoid causing damage. Any tampering by unauthorized personnel will void the warranty.

Battery and Accessories

To prevent damage to your phone, use only original accessories. The use of non-original batteries and headphones can cause overheating, failures, or even fire. Never store old batteries with regular trash, these are hazardous waste and must be disposed of in accordance with applicable laws. For more information on disposal it is advisable to consult the ecological center nearest to you.

Rules for everyday use

Never use your phone in environments with high temperatures (above 60°), do not expose it to direct sunlight, high humidity, or to particularly dusty areas.

These conditions of use may also cause severe damage that cannot be covered under warranty. To clean the phone, battery and battery charger always use a dry anti-static cloth, never

alcohol or other chemical solvents.

Safety of children and pets

Never leave your cell phone in places that can be easily reached by children or pets.

Audio video recordings

If your phone allows you to take pictures or make audio and video recordings, you should remember that these functions must always be used in compliance with the law and the privacy of other people.

Description of telephone



1. Speaker	2. Screen
3. Call button/ OK button	4. On button / Exit button
5. Function key	6. Alphanumeric keys
7. MicroUSB connector/ charge	8. SOS key
9. Speaker	10. Torch

Note: In standby mode, press the UP arrow key to access the main menu. Use the green button to access features or options. If you want to delete any of the information you entered, press the red button.

First time use

Inserting SIM card/SD card

Keep SIM cards out of the reach of children.

Consult your dealer about the SIM card and services related to its use.

Note: Always make sure that your phone is turned off before inserting or removing the SIM card, otherwise it may be damaged.

1. Remove the battery cover by lifting it up, insert the SIM card into the card slot with the notch on the top left and the gold contacts facing down.
2. Open the dedicated housing and lay the SD card with its gold contacts facing down, then close.
3. Replace the battery and close the lid.

Inserting/charging the battery

The cell phone should always use original batteries and accessories.

Open the cell phone from the rear, insert the battery by placing the gold connectors against the corresponding ones inside the phone itself. Subsequently close the cover of the phone.

To recharge the battery

1. Connect the charger to the phone.
2. Plug the charger into a suitable wall outlet.
3. When your phone indicates that the battery is fully charged, unplug the charger from the outlet.

Turning the phone on/off

1. To turn the phone on press and hold the on button for a few seconds.
2. In the event that the phone requires a lock code, enter it and press OK.

3. The default code is 1234.
4. If the phone requires a PIN code, enter the PIN code and press OK. The PIN code is usually supplied with the SIM card. Consult your network operator for more information.
5. To turn the phone off press and hold the on button for a few seconds.

Making/answering calls

Enter the phone number (with area code). As necessary, enter the country code of the country called or the direct number.

Press the green button to make or answer a phone call.

To end or reject an incoming/outgoing call, press the red button.

Menu Functions

This cell phone provides a number of features to be used and customized. These functions or options are arranged in menus and submenus. Use the Call or shutdown key to perform the functions indicated on the left or right of the display.

Note: By pressing and holding the UP arrow key in standby mode, the flashlight is turned on or off.

Guide to data entry

This phone has various methods of data entry, such as ABC (ABC), abc (abc) mode, numbers

mode (123) and predictive text that can be used to create the phonebook, SMS, alarm clock and other text applications.

Changing the input method

Press the # key to switch between input methods. Use the arrow key to scroll through the menu and then press the OK button to confirm your choice.

Method for numerical input

When the icon for the input method is "123", press the alphanumerical keys to enter the numbers directly.

ABC and abc Mode

When the icon is "ABC" or "abc", press the number keys (2 to 9) repeatedly until the letter you want appears in the text field. Press the alphanumeric key once for the first letter. Press twice for the second letter. Press the alphanumeric keys in this manner to achieve the desired letter. Press "0" to enter the number "0" or press and hold to insert a space.

Note: When using numeric input, to insert a space, switch to "ABC" or "abc" mode first, then press "0" to enter.

Predictive text input mode (slt)

The T103C has the predictive text input modes indicated by the abbreviation "slt" which allows a quick text input with the help of words pre-set in the phone's vocabulary.

Inserting special symbols

To insert special symbols such as ". ! ? = <> " etc., Follow these steps: pressing the * key will display the symbol table. Press the Up / Down arrows to move the

cursor in the table and select the desired symbol by pressing the OK button. Press the red button to exit the function.

Messages

SMS messages are a service provided by the operator and in some cases may not be enabled.

Writing a message

This function allows you to compose: SMS (text messages)

Incoming mail

- Display: makes it possible to read messages received
- Reply: reply to sender
- Call sender: recalls the sender immediately if the number is visible
- Forward: forward the message to other recipients
- Delete: delete the message
- Delete all: delete all SMS messages stored
- Save to Address Book: allows you to save the number of the sender in the phone book, if visible

Drafts

If you write or edit a message without sending it immediately, it will be saved in the Drafts folder and you can edit it, delete it or send it later.

Outgoing mail

If for any reason the message cannot be sent, it will be saved in this folder and you can edit, delete or try resend it later.

Sent mail

Contains all messages sent.

Templates

SMS

Allows you to write or remove preset messages for later use.

Message settings

Settings: allows you to configure default information on the properties of the SMS.
Message memory status capacity: allows you to check the memory status in the "Messages" menu under "Memory Status"

Phonebook (Contacts)

New contact

Select the destination (phone or SIM card), press “OK” and enter the contact information, then select “Save”.

Search

Allows you to easily and very quickly find the desired phone number from the phone book. Type the letters that match your search and press “OK”. Once you find a contact, you can select the functions call, edit, write message, delete, copy, move and other options.

Delete

Allows you to select some of the contacts in the phone book and delete them.

Copy

Allows you to copy all entries either from the SIM card or from the phone.

Move

Allows you to move the contacts from the SIM card to the phone and vice versa.

Quick Dial

Allows you to set the quick dial numbers using alphanumeric keys 2 to 9.

Other Functions

Allows you to view your phone number, memory status, etc ..

Calls record

The phone saves missed, dialed, received and rejected calls. It also records the duration of calls.

Calls record:

Missed calls: display list of missed calls.

Calls made: display list of calls made.

Calls received: display list of calls received.

Calls rejected: display list of calls rejected.

Delete all: deletes all the calls listed above.

Duration of calls:

Last call: displays the duration of the last call.

Calls received: displays the total duration of all calls received.

Calls made: displays the total duration of all calls made.

Calls log: displays the total duration of all calls.

Reset: Resets all counters.

Multimedia

Images

Displays the images in memory.

Audio

Note: the system does not currently support any type of audio files with a non-standard format.

Functions:

1. Play: to play the selected track
2. Music list: to update the list of music files
3. Replay > it is possible to select Off, Replay all, Replay single song

Note: press the * or # key to adjust the volume.

Recorder

The cell phone supports the following recording formats: AMR/WAV. It is possible to record conversations which can be saved in the Recorder folder. If there is a recording present, press the left button to select: new recording, settings, etc.

FM Radio

You can use your phone to listen to FM radio stations. Press the green button to enter Options from where you can select: Automatic search and save, stations list, save, manual search, speaker off and play in the background.

Background music> Enter the FM Radio menu and select background playback. The music will continue playing even when you exit the music screen (the music will stop when there is

an incoming call).

Alarm

The phone provides the possibility to set up to 3 alarms to suit your needs.

How to set the alarm:

- Select: Options, change, then customize the alarm according to your needs.
- You can select preset ringtones in the phone or use music files saved on your SD card, FM radio or recordings.

Applications

Torch

Allows you to turn the flashlight on/off.

Calendar

Allows you to see the date and add new events, based on your needs.

Calculator

The calculator can perform additions, subtractions, multiplications and divisions. Press the ‘’’ key to enter the decimal point. Press the UP, DOWN and OK, respectively, to select the various operations: +, -, *, /, =. Press the red button to delete digits.

Bluetooth

This menu allows you to: enable/disable the Bluetooth function; make your phone visible to other Bluetooth devices; associate and change the name displayed to other Bluetooth devices.

How to use the Bluetooth function:

- Activate the Bluetooth function, select Paired devices, add a new device to proceed with the search.
- Select the desired device and confirm the association through the Passkey.

It is also possible to view the status of file transmissions and the destination of incoming files.

Help: Displays quick information about functions

SIM

In this menu you can select the various features available on the operator's sim.

Settings

SOS Menu

Activate: Enables/Disables SOS mode

Numbers: enter manually or by selecting the contacts from the phone book. You can enter up to 5 numbers.

Sending SMS: it is possible to enable/disable the feature and change the default SMS. The

phone will automatically send this SMS as information to the numbers set.

Personal data: the user can enter personal information regarding: name, diseases, allergies and blood group, which may be useful to rescuers in case of intervention.

SOS Alarm: Used to disable the alarm.

Help: Displays quick information about functions

Call settings

Divert calls > This service allows you to forward incoming calls to another number. For more details contact your service provider.

Call on hold > If the service is active, you will be notified of a new incoming call during a call underway.

Call blocked > If the service is active (in the various options present), you can restrict incoming calls on your phone. For further details contact the provider.

Hide ID > Allows you to hide your number from the called party.

Other > The setting items include: a reminder of the minutes of the call, forwarding a call, vibrate when connected, automatic SMS upon rejection, automatic recording of the call.

Telephone settings

Date and time: sets the date/time, time format and type of date display.

Language settings: select the language desired for the phone and for the text.

Auto Power On/Off: it is possible to set the time to automatically switch your phone

Reset settings

With this function you can restore the factory settings. The password is 1234.

Screen

It is possible to set the background image, the contrast and the keyboard backlighting time.

Security

Your phone is equipped with a security system to prevent unauthorized use of the phone or the SIM card.

Functions

PIN: This service is initially provided by the operator, but can be changed. In case of problems, contact your network operator.

Changing the PIN2: This service is provided by the network. Contact your network operator.

Phone lock: If enabled, when you turn on your phone you will be prompted for a password.

Changing password of the cell phone: the default password for your phone can be changed.

Privacy: allows you to set a privacy filter for some of the main functions of the phone. The password is 1122.

Screen lock: if active, when in standby you can press the on/off button to lock the phone, followed by the “*” key.

Black list: When activated, you will not receive calls or messages from numbers on the list.

Profiles

Allows you to select Normal, Silent, Vibrate, Indoor, Outdoor and Offline. For each mode, you can configure the settings according to your needs.

Keyboard speaker

To activate the voice command in correspondence with the pressure of the keyboard
Settings > Profiles > Normale (Esterno-Interno) > Options > Settings > Others alert rings > Key tone > Human voice

Network selection

The automatic or manual network search can be set with this menu.

Maintenance and safety

Please read and carefully follow the information in this manual in order to use the phone in complete safety and to prevent possible damage.

Furthermore, always keep this manual in an accessible place for future reference.

Customer Service

Refer to what is stated in the warranty provided with this manual.

Safety of the charger and charging cradle: The charger and the charging cradle are designed for indoor use only.

Information and Battery Maintenance

- The battery is a hazardous waste and must be disposed of properly, respecting the environment and in compliance with the law.
- Do not disassemble or short the battery.
- Keep the battery's metal contacts clean.
- It is advisable not to leave the battery unused for long periods of time and occasionally recharge the battery to limit performance deterioration and prolong its life.
- The average life of the battery depends on the method of use and environmental

conditions.

- Battery protection excludes power to the phone in case of failure or improper use. To restore normal operation, remove the battery from its seat and reinsert it again and turn on the phone.

General information

- Using a damaged battery or ingesting it can cause serious injury.
- Do not hold the phone close to objects containing magnetic strip components such as a credit card, phone card, bank passbook or metro ticket because the magnetism of the phone may damage the data stored in the magnetic strip.
- When the phone is not used for a long period of time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (e.g. TV or radio) may cause interference with the cell phone.
- Do not immerse your phone in water and if this accidentally happens, remove the battery immediately and take it to an authorized service center.
- Never paint your phone or its accessories.
- The data saved in your phone might be deleted due to careless use, repair or software upgrade. Always save the data in your phone and/or micro SD card. The manufacturer is not liable for damages due to loss of data.
- Do not turn on or turn off the phone by holding it close to your ear.

Emergency Calls

This phone, like all phones, works by means of radio signals, wireless and wired networks which are not able to ensure the connection under all conditions. Therefore, do not rely solely upon cell phones for essential communications (e.g. Medical emergencies)

To make an emergency call:

1> Turn on your phone. Some operators may require that a valid SIM card is inserted.

2> Enter the public number for emergencies. Emergency numbers vary by location.

During an emergency call, remember to give all information in as much detail as possible. Do not interrupt the conversation until you are told to do so.

Troubleshooting

This section lists some problems that you might encounter while using the phone. If you feel that the phone does not operate normally, first reset the settings, then follow the Help directions for troubleshooting. If the problem persists and you are unable to resolve it, contact your local authorized service dealer or the shop where it was purchased it.

I cannot answer or make a call

- Make sure that the volume is not too low.
- Make sure that the phone is turned on.
- Make sure that the battery is charged.
- Make sure that the intensity of the signal is strong enough.

- Check whether the block call or any other safety function is active.
- Check whether call transfer has been activated or that the SIM card has been inserted properly.

Call volume

No sound

Check that the "Silent" option is not active.

Check that call transfer is not active.



MANUFACTURER'S LIMITED WARRANTY

This warranty does not limit the rights granted to consumers by specific national rules on consumer goods. The period of time during which this warranty is valid is limited to 24 months starting from the first date of purchase of the product. If it is used for professional purposes, the period is reduced to 12 months. During the warranty period, the national distributor Easyteck indicated at the bottom of this certificate, will, at its own expense and within a reasonable time, remove any interferences that may be encountered, and caused by manufacturing defects. Except as required by applicable law, the defects found by assistance

personnel will be resolved by repair or, at the discretion Easyteck, through the replacement of the Product.

This limited warranty is only valid in the European country for which the product is intended and is the sole responsibility of the national distributor of reference for that country and which is identified in the bottom of the certificate. Some limitations in assistance services covered by this warranty may arise from the presence of specific components for a country.

Warranty referred to accessories and spare parts contained in the package

The package for the product covered by this warranty may contain accessories or spare parts that have a different warranty period since they are consumables, the warranty periods are summarized as follows:

- 24 months for cell phones
- 12 months for non-consumable accessories
- 6 months for batteries, headsets, memory cards or other.

The following are not covered by the warranty:

- The manuals and/or packaging
- User contents, configurations downloaded into the product or third party software
- Costs related to shipping the product to and from an authorized service center
- Deterioration caused by normal wear and tear including batteries
- Breakage due to accidental causes or inexperience and all damages caused by any external agent.

-Damage caused by improper use as described in the manual supplied with the product.

-All failures caused by use of non-original accessories, by viruses, or by connections to computers and networks.

-All defects caused by exposure to moisture and/or steam, from use under extreme thermal or environmental conditions or in the presence of corrosion, oxidation, food, liquid or chemical spills.

Limits of Liability:

The SIM card that is required to use the phone is provided by the phone operator and is therefore excluded from the warranty.

-This warranty is the protection given to the consumer by Easyteck through the reference dealer and is not intended to limit guarantees to the consumer which the retailer must ensure in accordance with the laws of the different countries.

-This warranty will be honored only and exclusively at authorized service centers or at retailers that are responsible for selling Easyteck brand products.

-The terms of the Guarantee shall not be extended under any circumstances and will be effective only from the date the product is first sold to the final consumer, as certified by a valid receipt.

-The faulty parts replaced during repairs under warranty are the sole property of Easyteck and cannot be demanded by the consumer in any way.

-To the extent permitted by applicable law and in the absence of fraud, no liability is attribu-

table to Easyteck for damages due to loss of user data caused by any defect covered by the warranty.

-The consumer, to be able to obtain the repair, must always deliver the product to the authorized service center at his own expense, devoid of any lock or security code that limits or prevents use.

-Loss of profit, losses caused by non-use of the product or loss of revenues for any direct, indirect, special or consequential damages are also excluded from the liability.

-The responsibility of Easyteck is always limited to the purchase value of the product and the consumer is always responsible for keeping a copy of the personal data and software stored in the phone's memory.

-For faults which, for the reasons listed above, are not attributable to the terms of this warranty the consumer who does not want to have the repair carried out, will be required to pay the corresponding amount requested by the service center. Easyteck shall in no way be held responsible for this request because it is not under warranty.

CAUTION: The warranty is not valid if any attempts have been made to open or tamper with the product, including remove and/or obliterate labels and/or the IMEI code of the product.

Distributor for Italy: Fonex S.p.A. via dell'Artigianato 2/4 – 12040 – Sant'Albano Stura (CN)

C € 0700

Stamp and signature of dealer
Date purchased: _____



INFORMATION FOR USERS

**pursuant to Legislative Decree No. 49 of March 14, 2014
"Implementation of Directive 2012/19 / EU on Waste Electrical and Electronic Equipment (WEEE)"**

This wheeled bin symbol on the product indicates that at the end of its life must be collected separately from other waste. The user must, therefore, take the remote control integrates the essential components that got to its life to the appropriate differentiated collection centers for electronic and electro-technical waste, or return it to the dealer when purchasing a new appliance of equivalent type, in terms of one to one, or one to zero for equipment having longer side of less than 25 cm. Appropriate separate collection for the decommissioned equipment

for recycling, processing and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. Illegal dumping of the product by the user entails the application of administrative sanctions stated in Legislative Decree n. Legislative Decree No. 49 of March 14, 2014.



Your product contains batteries covered by the European Directive 2013/56/EU, and that can not be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environment and health.

The battery is incorporated, to be disposed at the end of the useful life of the product, it can not be removed by the user. In this case, recycling or recovery centers handle the dismantling of the product and remove the battery.

READ AND SAVE AS IT CONTAINS IMPORTANT INFORMATION

Declaration of conformity Directive RED 2014/53/EU

The company FONEX SPA declares that the product T103C complies with the essential requirements of the RED 2014/53/EU.

The declaration of conformity in complete form is available at the headquarters of FONEX SPA via dell'Artigianato 2/4 - 12040 - Sant'Albano Stura (CN)

Product sold in the European community

Manufactured by Fonex S.p.A. via dell'artigianato 2/4 Sant'Albano Stura (CN)

MADE IN CHINA



to avoid possible hearing damage, limit the amount of time listening at high volumes