

INDEX

Product Overview	12
Insert SIM card and battery	14
Insert T-Flash	17
Make calls	21
SMS	28
Phonebook	32
Call center	33
Call settings	35
Multimedia	37
FM radio	39
Dual SIM setting	41
Restore factory settings	43
Service	46

TO ENSURE SAFE AND PROPER USE

Please read these guidelines to avoid an illegal or dangerous use.
For additional information please read the user manual.



Safe turning on of the device

Do not turn on the device when use of same is not allowed or when its use may cause interferences or danger situations.



Safety on traffic on top

Please obey local regulations, drive with both hands and strictly re-spect road safety.



Interferences

All wireless devices may have work improperly, owing to interferences.



Turning off when in hospital

Please obey the restriction rules and turn off the device near hospitals.



Turning off when on flight

Please obey the relevant rules and restrictions; any interference caused by a wireless device may be dangerous.



Turning off in service areas

Turn off wireless devices in gas station, or near chemical or inflammable stuff.



Qualified service

Only qualified staff is recommended for device installation and maintenance.



Accessories and batteries

Use only approved accessories and batteries, always use compatible devices.



Impermeability

This kind of device is not water-proof. You should keep it in dry places.



Get a copy

Remember to save one copy of any important data memorized in your device, for fear they may get lost due to unpredictable reasons.



Emergency call

Make sure network is available and the “call” feature is activated; when some network features are active, emergency call might be unavailable. So please deactivate these functions and dial the emergency number once again.

GENERAL RULES FOR A SAFE USE

- Only use batteries and battery chargers approved by the manufacturer. Use of any other product may cause losses to the battery, overheating, explosion or flame.
- Avoid crashes, shakings, or violent throws of your device.
- Do not put battery, phone or battery charger in microwave ovens or in any other high pressure device.
- Avoid to use phone in places containing explosive gas, it could not function or catch fire.

- The phone should be kept away from heat sources, do not expose it to excessive dust or humidity, which could cause malfunctions.
- Phone must be kept out of reach of children.
- Do not lay the phone on an unstable or unsmoothy surface.

TIPS FOR A SAFE USE OF THE PHONE

- Remember to switch your phone off when in hospital, in flight or in places where use of mobile is not allowed. Mobile phones could affect normal functions of electronic or medical devices; therefore please obey the concerned rules. Please make sure that your mobile phone does not switch on automatically in flight due to the “alarm” function.
- Do not use your mobile phone when the signal is weak or you are in proximity of electronic devices of high precision, particularly near aids for people with hearing disabilities, pacemakers and other medical devices, near fire alarms, car doors or other automatic control devices.
- Do not tap or hit heavily the display, it could break.

- Do not disassemble or modify the phone, it could be dangerous and may cause malfunctioning.
- Do not use needles or pen tops to tap on keyboard; this may cause a serious damage and prevent its working.
- Do not store the phone near magnetic strips, the radiations could cancel information stored in the hard disk, payment or credit cards.
- Keep the phone dry, any pouring or spilling of water or other liquids may cause an overheating, loss or bad working of the phone.
- You are requested to use suitable earphones when driving.

RULES FOR SAFE USE OF BATTERY

- Do not throw the battery into the fire, it could catch fire and explode.
- Do not weld the contacts of the battery, it might cause losses, overheating, explosion or flame.
- Should the battery liquids affect eyes, rinse them well with abundant water, do not rub with fingers and go immediately to the hospital.
- Do not disassemble or modify the battery, it could cause losses, overheating, explo

- sion or flame.
 - Do not use the battery near fire or heating devices; this could cause losses, overheating, explosion or flame.
 - Should the battery overheat, change colour or deform during its use, when it is under charge or in deposit, please stop immediately the use of same and replace it immediately.
 - Should the battery have losses or exhale bad smells, immediately remove it from heating sources, to avoid danger of fire or explosion.
 - Do not store the battery in wet conditions, this may cause overheating, smoke or erosion of the battery itself.
- Keep the battery far from places exposed to the blazing sun or at high temperatures, this may cause losses or overheating which could affect the lifespan of the battery.

RULES FOR SAFE USE OF BATTERY CHARGER

- Please use alternating current 220V; a misuse could cause losses, fire or damages to the phone and to the battery charger.
- Avoid short-circuits to the battery charger; this could cause electric discharges, smoke

and could damage the battery charger.

- Control the battery charger does not have a damaged cable, it could cause fire and electric discharges.
- Keep the battery charger far from water holders to avoid sprinkling which could cause overheating, losses or bad working.
- Should the battery charger get wet due to water or any other liquid, immediately disconnect it from the power socket to avoid any overheating, fire, electric discharge or bad working.
- Do not disassemble or modify the battery charger, this may cause damage to person, electric discharge, fire or damages.
- Avoid to store it in places with high umidity like bathrooms; this could cause electric discharges, fire or bad working.
- Do not handle the battery charger, the power cable or socket with wet hands.
- Do not overload or modify the power cable, this could cause electric discharges or fire.
- Unplug the power cable prior to any cleaning or maintaining of your phone.
- Hold steady the battery charger when unplugging, otherwise the power cable could break and cause electric discharges or fire.

CLEANING AND MAINTAINING

- Mobile phone, battery and battery charger are not impermeable, thus they should not be used in places with high humidity like bathrooms. Make sure the phone does not become wet under rain.
- Use a soft cloth to clean phone, battery and battery charger.
- Do not use alcohol, diluents or benzine to clean the phone.

GENERAL TIPS

For the phone:

- do not use your mobile phone next to other phones, television, radio and electronic devices in offices

For the battery:

- store the battery in places not exposed to blazing sunlight, in fresh and windy places.
- battery has a limited lifespan; after frequent charges the charging time shortens. If the battery does not charge after several attempts, this means that it should be replaced

with a new, specific and approved battery.


- please dispose of the exhausted batteries obeying the local laws, separately from the daily waste.

For the battery charger:

- Do not charge in the following places: under blazing sunlight, in places with temperature inferior to 5° or superior to 40°; in wet, dusty places and with vibrations which may cause bad working; near to electronic devices as TV and radios (this may damage quality of sound and images).



1. Answer the call
2. End call (on / off)
3. Memories favorite numbers
4. Function key right
5. Function key left
6. Navigator
7. Flashlight / amplified audio
8. Volume keys
9. SOS button
10. Connector 3.5mm audio jack
11. Power supply connector
12. Camera

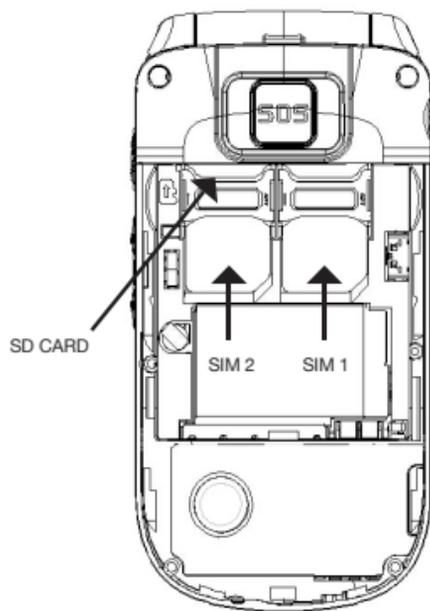

Getting started

Installing the SIM Cards and the Battery

An SIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

Note:After powering off your mobile phone, wait for a few seconds before removing or inserting an SIM card.

Exercise caution when operating an SIM card, as friction or bending will damage the SIM card.

Properly keep the mobile phone and its fittings such as the SIM cards beyond children's reach.

Installation

- Hold the End key for a while to power off the mobile phone
- Push the back cover above the battery and remove it.
- Pull the left battery buckle outward and then lift the battery away.
- Insert the SIM card into the SIM card slot lightly with the corner cutting of the card aligning

to the notch of the slot and the gold plate of the card facing down, till the SIM card cannot be further pushed in.

- With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place.

Using code

The mobile phone and the SIM cards support sorts of passwords, in order to prevent the phone and the SIM cards from being misused. When you are prompted to input any of the codes mentioned below, just input the correct code and then press the ok key. If you input a wrong code, press the Right soft key to clear it and then input the correct code.

Phone lock code

The phone lock code may be set to prevent your mobile phone from being misused. In general, this code is provided along with the mobile phone by the manufacturer. The initial phone lock code is set to 0000 by the manufacturer. If the phone lock code is set, you need to input the phone lock code when powering on the mobile phone.

PIN

The PIN (Personal identification number, 4 to 8 digits) code prevents your SIM card from being used by unauthorized people. In general, the PIN is supplied with SIM card by the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The SIM card will be locked if you input wrong PIN code for three times.

Unlocking methods as follows:

- Input the correct PUK according to the screen tips to unlock the SIM card.
 - Then input the new PIN and press the ok key.
 - Input the new PIN again and then press the ok key.
 - If the input PUK is correct, the SIM card will be unlocked and the PIN will be reset.
- Note: The SIM card will be locked if you input wrong PIN code for three times. To unlock the SIM card, you need to input the PUK. In general, the PUK can be obtained from the network operator.

PUK

The PUK code (Personal Unlocking Key) is required to change a blocked PIN. It is supplied with SIM card. If not, contact your network operator. If you input wrong PUK code for 10

times, SIM card will be invalid. Please contact the network operator to replace the SIM card.

Barring code

A barring code is required for setting the call barring function. You can obtain this code from the network operator to set the call barring function.

Installing T-Flash Card

The T-Flash card is a pluggable mobile storage card inside the mobile phone.

To install the T-Flash card, insert the card into the card slot.

To remove the T-flash card, take the card out.

Note:

1. The mobile phone cannot automatically identify the T-flash card being inserted when the mobile phone is powered on. You must power off the mobile phone and then power it on, so that the phone can identify the T-Flash card.
2. The T-Flash card is a miniature object. Keep it out of the reach of children for fear that children swallow it!

Charging the Battery

The lithium battery delivered with the mobile phone can be put into use immediately after being unpacked.

Battery level indication:

- Your mobile phone can monitor and display the battery state.
- Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen.
- When the battery energy is insufficient, the mobile phone prompts “Battery low”. If you have set an alert tone, an alert tone will be given off when the battery level is too low.
- A charging animation appears when the battery is being charged. When the charging is complete, the animation disappears.
- Using a travel adapter:
 - Install the battery into the mobile phone before charging the battery.
 - Connect the adapter of the travel charger with the charging slot in the mobile phone. Ensure that the adapter is fully inserted.
 - Insert the plug of the travel charger to an appropriate power outlet.
 - During the charging, the battery level grids in the battery icon keep flickering till the battery is fully charged.

- It is normal when the battery is become hot during the charging period.
- The battery icon does no longer flicker when the charging process ends.

Note:

Ensure that the plug of the charger, the plug of the earphone, and the plug of the USB cable are inserted in the right direction. Inserting them in a wrong direction may cause charging failure or other problems.

Before the charging, ensure that the standard voltage and frequency of the local mains supply match the rated voltage and power of the travel charger.

Using the Battery

The performance of a battery is subject to multiple factors: radio network configuration, signal strength, ambient temperature, chosen functions or settings, phone fittings, and the voice, data or other application mode you choose to use.

To guarantee the optimal performance of your battery, please stick to the following rules:

- Use only the battery provided by the vendor. Otherwise, damages or even injuries could be caused during the charging.
- Power off the mobile phone before removing the battery.
- The charging process lasts a longer time for a new battery or a battery not in use for long.

If the battery voltage is too low to enable the mobile phone to be powered on, charge the battery for a longer time. In this case, the battery icon does not flicker until a long time after the battery enters the charge status.

- During the charging, ensure the battery is placed in a room temperature environment or in an environment close to room temperature.
- Immediately stop using the battery if the battery produces odor, overheats, cracks, distorts or has other damage, or if the electrolyte leaks.
- The battery wears out with use. A longer charging time is required as the battery is put into use for a long time. If the total conversation duration decreases but the charging time increases even though the battery is properly charged, purchase a standard battery from the OEM or use a battery approved by our company. Using any poor-quality fittings will cause harm to your mobile phone or even incur danger!

Note: To guarantee your personal safety and protect the environment, do not litter the battery! Return the old battery to the mobile phone manufacturer or place it in specified battery reclamation areas. Do not litter any battery with other rubbish.

Warning: Short-circuits of the battery may cause explosion, fire, personal injury or other severe consequences!

Powering On/Off the Mobile Phone

Hold the End key for a while to power on the mobile phone. A power-on animation appears on the display screen.

Input the phone lock code and press the ok key if the mobile phone prompts you to input the phone lock code. The original code is 0000.

Input the PIN and press the ok key if the mobile phone prompts you to input the PIN. The PIN is provided by the network operator for new opening SIM card.

Enter the standby interface.

To power off the mobile phone, hold the End key for a while.

Linking to the Network

After the SIM card and the mobile phone are successfully unlocked, the mobile phone automatically searches for an available network. After finding a network, the mobile phone enters the standby state. When the mobile phone is registered in the network, the name of the network operator is displayed on the screen. Then you can dial or receive a call.

Dialing Calls

In the standby interface, press number keys to input the area code and the telephone num-

ber, and then press the Dial key to dial a call. To end the call, press the End key.

Dialing an international call

Press the * key twice can input "+". Then input the country code, the area code and the telephone number. Finally, press the Dial key.

Dialing a call to a number in the phonebook

Enter the phonebook and use the up or down direction keys to find the telephone number you want to call.

Press the Dial key. The mobile phone automatically dials the chosen telephone number.

Redialing the last number

In the standby interface, press the dial key to show the dialed calls.

Press the up or down direction keys to select a number you want to dial and then press the Dial key.

Answering incoming calls

Press the Dial key or the Ok key to answer an incoming call.

Press the End key to end the current conversation.

To reject an incoming call, press the End key or the Right soft key.

Note: If the caller can be identified, the mobile phone will present the calling number. If the calling number exists in the phonebook, the mobile phone will present both the name and the phone number of the caller. If the caller cannot be identified, the mobile phone will present the calling number only. You can answer an incoming call when using a function list or browsing the phonebook.

Using options during a conversation

Select Options during a conversation to pause, end the ongoing call, originate a new call, browse the phonebook, view information, set the mute, set the DTMF, or perform other operations. For details, refer to the menu guide.

Using the Headset (if headset is included in accessory)

It would enter headset mode automatically when you insert headset to the slot. Make sure of inserting it at the bottom of the slot, or you can't use it normally.

Input method

This mobile phone provides multiple input methods, including English, Hebrew, Russian, Arabic input and numeric input. You can use these input methods when editing the phonebook, short messages, files and so on.

Icons for Input Methods

After you enter an edit window such as a window for editing the phonebook, short messages or the memorandum, an icon is displayed to indicate the current input method:

Numeric input: "123"

English input in upper case: "ABC"

English input in lower case: "abc"

To Shift Entry Methods

Press the # key to switch between input methods.

Numeric Input

You can input numbers with the numeric input method. Press a number key to input the corresponding number.

English input and numeric input

The keyboards for English input and numeric input are defined in the following table:

Key	Character or Function
Number key 1	. , - ? ! ' @ : # \$ / _ 1
Number key 2	ABCabc2
Number key 3	DEFdef3
Number key 4	GHIghi4
Number key 5	JKLjkl5
Number key 6	MNOmno6
Number key 7	PQRSpqrs7

Number key 8	TUVtuv8
Number key 9	WXYZwxyz9
Number key 0	0
* key	Press it to input a symbol
# key	Press it to switch between input methods
Left soft key	Equivalent to OK or Options
Right soft key	Equivalent to Back or Clear
End key	Press it to return to the standby interface

English input

Each key is used to represent multiple characters. Quickly and continuously press a key till the character you want appears. Input the next character after the cursor moves.

- Press the # key to switch between input methods.
- To clear wrong inputs, press the Right soft key.

Inserting a Symbol

Press the * key to enter the Select symbol interface, use direction keys to select a symbol you want.

Using the Menus

Messages

The phone supports Short Messaging Service (SMS) and Multimedia Message Service (MMS). You can send text messages and manage the messages that you sent and received. In the message, select the option to see operate the other new menu.

Write message

- New SMS: In this menu, you can edit and send new messages. The characters for every message can be up to 160. The operations for editing messages are as follows:
- New MMS: Edit Recipients, set the telephone number or the e-mail address of the recipients and synchronously edit the content of SMS. Send to the recipients or save as a draft after completing.

Inbox

In the inbox, you can store all the received text messages, and it will display the names of the senders. In the case that the sender is not included in the phonebook, it will display the telephone number of the sender.

The options for a single message include: reply, delete, Call, etc.

- Reply: Reply the short message or MMS
- Delete: Delete the short message.
- Call sender: Call the number in the short message.
- Mark: Mark the current message or mark all.

You cannot receive new messages if the memory for messages is full. Delete unnecessary messages.

Drafts

Choose the completed Messages, press the up key and the down key to select and press the left softkey to enter the Options.

- Edit: edit the current selected message.
- Delete: delete this message.
- Mark: mark the current message or mark all.

Outbox

Send in sending messages and failed message will be saved in the Outbox.

Archive

Set to save short messages to the SIM card or to the phone.

Select to save and send in sending messages and the sent messages will be saved in the Outbox.

This is to preserve the message has been sent.

Delete messages

Delete the short message.

Broadcast messages

Broadcast messages are messages that your network operator broadcasts to all users within a particular area, such as weather forecast and transportation conditions.

- Receive mode: Enable or disable the function.
- Language: Set languages for cell broadcast information. Only information in the set language can be received.
- Read messages: Scroll to read broadcast messages.
- Note: All Multimedia messages are stored at the memory of the mobile phone instead of SIM card.

Templates

There are 10 text messages preset in this mobile phone, and they can be edited or deleted, with not more than 40 characters apiece

Message settings

Text message settings

Memory status: Display SIM card center number.

Message validity period: Show the validity of messages saved.

Preferred storage: Set to save short messages to the SIM card or to the phone.

Please refer to Inbox for other operations.

Save sent message: After sending messages, asking to store

Voicemail server: Dial the voice mail number to access your voice mail. The number is provided by your network operator. With the voice mailbox menu, you can carry out the following operations.

Multimedia message settings

MMS account: You can edit and start up the SIM server.

Delivery report: You can set whether to send delivery report.

Read report: You can set whether to send read report.

Priority: Set the send message priority.

Retrieve MMS: Set retrieve MMS manual or auto.

Play sound: Set the MMS whether can to play sound.

Advertising: You can set whether to receive advertisements.

Message validity period: You can set the valid period.

Preferred Storage: You can set save MMS to the SIM card or to the phone.

Message memory: Show phone or SIM card memory capacity.

Phonebook

The mobile phone can store up to 500 telephone numbers. The number of telephone numbers that an SIM card can store depends on the storage capacity of the SIM card. The telephone numbers stored in the mobile phone and in the SIM cards form a phonebook. After selecting a telephone number in the phonebook, select Options to perform the following operations:

- View: View the content of the telephone number.
- Sent text message: sent text message to the selected number.

- Call: call the current number of the SIM.
- Edit: Edit the selected number and name.
- Delete: Delete the telephone number from the phonebook.
- Copy: Duplicate the telephone number from the mobile phone to the SIM card or from the SIM card to the mobile phone.
- Move: you can move the current number to phone
- Add to blacklist: you can add this number to blacklist
- Phonebook settings: preferred storage, speed dial, my number, extra numbers, memory status, copy contacts, move contacts, delete all contacts

Call Center

Call history

Missed Calls

You can view a list of the latest missed calls.

Note: When the mobile phone indicates that some calls are missed, you can select Read to enter the missed calls list. Navigate to a missed call and then press the Dial key to dial the

number that originated that call.

Dialed Calls

You can view the latest dialed calls. Choose dialed calls and then select a dialed call to delete, save, dial, or edit (or send a short message to it).

Received Calls

You can view the latest received calls. Choose received calls and then select a received call to delete, save, dial, or edit (or send a short message to it).

Delete call logs

You can delete the latest call records. Choose Delete call logs and then select to delete all the numbers in the call history, or delete only the numbers in the missed calls list, the dialed calls list or the received calls list.

Call timers

Choose call timers to view the last call time, the total time of all dialed calls and the total time of all received calls, and/or to reset all the time.

Text msg. counter

Choose Text msg. counter to set the number of short messages sent and the number of short messages receive.

Call settings

SIM call settings

Caller ID: You can set caller ID as set by network , hide ID or send ID .

Call waiting: After you choose Activate, the mobile phone will contact the network. A moment later, the network will make a response and send a message to acknowledge your operation. If the call waiting function is activated, the network will alert you and the mobile phone screen will display the incoming call number if others are calling you while you are already in a conversation.

Call divert: this network function enables you to forward incoming calls to another number you have previously specified.

Call barring: The call barring function enables you to bar calls as needed. When setting this function, you need to use a network barring code, which can be obtained from the network operator. If the code is wrong, an error message will be prompted on the screen. After se-

lecting a call barring option, continue to select Activate or Deactivate. The mobile phone will prompt you to input the call barring code and then contact the network. A moment later, the network will make a response and send the operation results to the mobile phone.

Group list: You can add, delete or edit list in this function.

Advanced settings

Blacklist: He or she can't call you if you set the blacklist status to on and add his or her number to blacklist.

Auto redial: Set it to On or Off to enable or disable auto redial. If you set Auto redial to On, the mobile phone will automatically redial the number a moment later if the called party does not reply. The number of auto redial times can be set to a maximum of 10. In the auto redial period, you cannot dial other numbers. To end the auto redial process, press the End key.

Note: This function requires support from the network operator to which the SIM card is registered.

Background sond

Call time display: You can set it as On or Off. The call time will be displayed when set on.

Call time reminder: To set single or circle tone in a call to make you know the time.

Auto quick end: You can set ON/ OFF, and set a time (1~9999s) as your desire.

Reject by SMS: Reject an incoming call and reply the caller a short message.

Connect notice: You can set on or off.

Answer mode: Select an answer mode as per your need.

Multimedia

Camera

The phone is provided with a camera, which supports the photographing functions. Roll the phone to align the camera to the picture and then press OK key to capture photos. Pictures will be saved in the file system of the phone or the memory card. In the capture interface, you can press up or down direction key to switch camera or video; left or right direction key to zoom in and zoom out.

Video recorder

This function enables you to record dynamic pictures. In the capture interface, press left or right direction key to zoom in and zoom out, OK key to capture videos clip.

Images

You can view the pictures or images through this function.

Video player

Use this function to play video files. By pressing the direction key can you control the playing process of video player: play/pause(up key), fast forward (press and hold right direction key) and rewind (press and hold left direction key). In video player interface, you can press 2 or 8 key to tune volume;press * key to full screen;press # key to silent.

Photo editor

You can edit the pictures or images through this function.

Audio player

Use this function to play audio files. By pressing the direction key can you control the playing process of audio player: play/pause(up key), stop(down key),switch to last song/next song (press left or right direction key). In audio player interface, you can press side key to tune volume.

Sound recorder

After accessing the sound recorder, you can press left soft key to perform the following operations:

- New record: select this function to record a new file.
- List: recorded files are listed in this menu.
- Settings: Through this function, you can set storage position and format for record files.

FM radio

You can use the application as a traditional FM radio with automatic tuning and saved channels. In FM radio interface, you can press side key or up and down to tune volume, press OK key to play/pause the playing process of the current channel, press left or right key to switch last/next channel.

You also can long time press * to play FM.

SOS Setting

- SOS mode setting: Select On / Off then the SOS function will be able or disable.
- SOS Message: you can edit the message by default for SOS to sent to some one.
- Set SOS numbers: you can set up to 5 numbers for SOS calls. The telephone will automati-

cally call these 5 numbers when SOS function activated.

Settings

Boost

Switch the boost on or off by the menu. Also, BOOST KEY is the same.

Family Number

From this menu, you are encouraged to select three numbers from your phone book. After this, you can make call to these numbers simply by long press M1 or M2 M3 keys in the idle screen.

User profiles

The mobile phone provides multiple user profiles, so that you can customize some settings to adapt to the specific events and environments.

Customize the user profiles according to your preference and then activate the user profiles.

The user profiles fall into four scenarios: General, Silent, Meeting, Outdoor and My style.

When you insert an earpiece to the mobile phone, the mobile phone automatically enters the

Headset mode.

Dual SIM Settings

Dual-SIM refers to two SIM card slots, and the two cards can standby at the same time or set one of them to display on the idle screen.

Phone Settings

- Time and date: set the home city, time/date and format.

Note: If you remove the battery from the mobile phone or if the battery energy was exhausted a long time ago, you may need to reset the date and time when re-inserting the battery or powering on the mobile phone after recharging.

- Schedule power on/off: Set the time when the mobile phone will be automatically powered on or off.
- Language: Select the display language for the mobile phone.
- Pref. input method: Select preferred input method as needed.
- Display settings: Users can access this item to set wallpaper, date and time power on/off display, etc.
- Auto update time: Activate/deactivate this function as per your need.

- Flight mode: when this function is engaged, it will suspend many of the device's signal transmitting functions – thereby disabling the device's capacity to place or receive calls or text messages– while still permitting use of other functions that do not require signal transmission (e.g. games, built-in camera, MP3 player.)
- Signal LED: you can choose the signal LED on, off or Night mode here.
- LCD backlight: you can choose the brightness and time for the backlight.

Network Settings

You can set SIM1, SIM2 and GPRS data here.

Security Settings

This function provides you with related settings about safety use

- SIM security

PIN lock: To activate PIN lock, you need to input the correct PIN code. If you set PIN lock to On, you need to input the PIN each time you power on the mobile phone. In the case you input a wrong PIN for three consecutive times, you need to input the PIN Unblocking Key (PUK). The PUK is used to unlock and change the locked PIN. To obtain the PUK, contact the network operator.

Change PIN: To change PIN code of SIM card.

Change PIN2: To change PIN2 code of PIN code.

- Phone security

Phone lock: The function enables you to lock/unlock the phone. Entering password to switch on or off the phone. Password is required when the phone is locked. The password is 4 to 8 digits.

Change password: to change phone password.

- Auto keypad lock

The function enables you to lock/unlock the keypad. Setting the auto locking time that 15s, 30s, 1min or 5mins is available. The keypad will be auto locked with no operation during the period.

Connectivity

- Data account: You can select the desired network account.
- Internet tethering

Restore factory settings

Use this function to restore factory settings. The preset password is 0000.

File manager

The phone provides a certain space for users to manage files and supports the Memory card. The capacity of the Memory card is selectable. You can use the file manager to conveniently manage various directories and files on the phone and the Memory card.

- **Open:** Choose File manager to enter the root directory of the memory. The root directory will list the default folders, new folders and user files. When the mobile phone is powered on for the first time or when you have not changed the directory, the root directory contains the default folders only.
- **Format:** You can use this function to format all the data in the memory. The system will re-create a default folder. The formatted data cannot be recovered. Therefore, think twice before using the formatting function.

Organizer

Calendar

Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc. Days with events entered will be marked.

Calculator

The calculator can add, subtract, multiply and divide. To use the calculator.

Tasks

Use this function to create new memo, which you can view, add, edit, delete, delete overdue, delete all, jump to date, view uncompleted, send V-Calendar and saved as file. If you have set the alarm for the memo, alarm will sound when time is up, the content of memo will display at the same time.

Alarm

Five alarm clocks are set but deactivated by default. You can activate one, multiple or all of them as needed. For each alarm clock, the ringing date and the ringing time can be set.

World clock

You can check the time zone and city here

Notes

Add notes and edit or delete them.

Bluetooth

Power: Open or close the function of Bluetooth

Visibility: Open or close the function of visibility.

My device: Following this, you can search new Bluetooth devices. The difference between My device and inquiry audio device is: the hands-free of Bluetooth devices can only receive data, such as Bluetooth earphone; My device can receive and send data, such as Bluetooth cell phone.

Search audio device: when it is on, it will search audio device.

My name: View the name of the Bluetooth in this phone

Services

Internet service

This function enables you to view the internet. Your phone will ask you with existed way. You can start to view only by starting corresponding way.

Homepage: indicates the default website of the internet

Bookmarks: used to save most commonly-used websites

Search or input URL: input the website to be searched and press finish button to access to

the network directly

Last web address: you can find the last web you used here.

Recent Pages: browse the record of the recently browsed web pages

Stored pages: you can find all stored pages here

Settings: set up WAP-related service

Note: Consulting the local network operator for related fee and specific setup.



MANUFACTURER'S LIMITED WARRANTY

This warranty does not limit the rights granted to consumers by specific national rules on consumer goods. The period of time during which this warranty is valid is limited to 24 months starting from the first date of purchase of the product. If it is used for professional purposes, the period is reduced to 12 months. During the warranty period, the national distributor Easyteck indicated at the bottom of this certificate, will, at its own expense and within a reasonable time, remove any interferences that may be encountered, and caused by manufacturing defects. Except as required by applicable law, the defects found by assistance personnel will be resolved by repair or, at the discretion Easyteck, through the replacement of the Product. This limited warranty is only valid in the European country for which the product is intended and is the sole responsibility of the national distributor of reference for that country and which is identified in the bottom of the certificate. Some limitations in assistance services covered by this warranty may arise from the presence of specific components for a country.

Warranty referred to accessories and spare parts contained in the package

The package for the product covered by this warranty may contain accessories or spare parts that have a different warranty period since they are consumables, the warranty periods are summarized as follows:

- 24 months for cell phones

- 12 months for non-consumable accessories
- 6 months for batteries, headsets, memory cards or other.

The following are not covered by the warranty:

- The manuals and/or packaging
- User contents, configurations downloaded into the product or third party software
- Costs related to shipping the product to and from an authorized service center
- Deterioration caused by normal wear and tear including batteries
- Breakage due to accidental causes or inexperience and all damages caused by any external agent.
- Damage caused by improper use as described in the manual supplied with the product.
- All failures caused by use of non-original accessories, by viruses, or by connections to computers and networks.
- All defects caused by exposure to moisture and/or steam, from use under extreme thermal or environmental conditions or in the presence of corrosion, oxidation, food, liquid or chemical spills.

Limits of Liability:

The SIM card that is required to use the phone is provided by the phone operator and is therefore excluded from the warranty.

-This warranty is the protection given to the consumer by Easyteck through the reference dealer and is not intended to limit guarantees to the consumer which the retailer must ensure in accordance with the laws of the different countries.

- This warranty will be honored only and exclusively at authorized service centers or at retailers that are responsible for selling Easyteck brand products.
- The terms of the Guarantee shall not be extended under any circumstances and will be effective only from the date the product is first sold to the final consumer, as certified by a valid receipt.
- The faulty parts replaced during repairs under warranty are the sole property of Easyteck and cannot be demanded by the consumer in any way.
- To the extent permitted by applicable law and in the absence of fraud, no liability is attributable to Easyteck for damages due to loss of user data caused by any defect covered by the warranty.
- The consumer, to be able to obtain the repair, must always deliver the product to the authorized service center at his own expense, devoid of any lock or security code that limits or prevents use.
- Loss of profit, losses caused by non-use of the product or loss of revenues for any direct, indirect, special or consequential damages are also excluded from the liability.
- The responsibility of Easyteck is always limited to the purchase value of the product and the consumer is always responsible for keeping a copy of the personal data and software stored in the phone's memory.
- For faults which, for the reasons listed above, are not attributable to the terms of this warranty the consumer who does not want to have the repair carried out, will be required to pay the corresponding amount requested by the service center. Easyteck shall in no way be held responsible for this request because it is not under warranty.

CAUTION: The warranty is not valid if any attempts have been made to open or tamper with the product, including remove and/or obliterate labels and/or the IMEI code of the product.

Distributor for Italy:

Fonex S.p.A. via dell'Artigianato 2/4 – 12040 – Sant'Albano Stura (CN)

Stamp and signature of dealer

Date of purchase

C € 2200



CORRECT DISPOSAL OF THE PRODUCT INFORMATION FOR USERS

pursuant to Article 13 of the Legislative Decree of 25 July 2005, No. 151 "Implementation of Directives 2002/95/EC, Directive 2002/96/EC and 2003/108/EC on restricting the use of hazardous substances in electrical and electronic equipment and the disposal of waste"

The symbol of the crossed-out dustbin shown on the equipment or on the packaging indicates that the product, at the end of its useful life, must be collected separately from other waste. The recycling of this equipment at the end of life is organized and managed by the manufacturer. The user who wishes to dispose of this equipment should contact the manufacturer and follow the system that it has adopted to allow for the separate collection of at end of life. Appropriate separate collection in order to send old equipment for compatible recycling, treatment and disposal helps to prevent potential negative effects on the environment and on health and promotes the reuse and/or recycling of the materials of which the equipment is composed.

Illegal disposal of the product by the owner will result in the application of administrative penalties provided by law.



CORRECT DISPOSAL OF PRODUCT BATTERY

(Applicable in THE European Union and other European countries with separate battery collection systems)

The marking on the battery or on documentation or packaging indicates that the battery in this product should not be disposed of with other household waste at the end of the life cycle.

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead in quantities above the levels referred to in the EU Directive 2006/66.

If the battery is not properly disposed of, these substances can cause harm to human health or the environment.

Declaration of conformity

We hereby declare that the product T10W/T510-T510R-T510W has been tested by SIEMIC and has passed the standards required by EMC 1999/5/EC for the following specification:

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013, EN 50360-2001/A1:2012, EN 50566-2013, EN 62209-1:2006, EN 62209-2:2010, EN 50332-1:2000, EN 50332-2:2003, EN 62479:2010, EN 301 489-1 V1.9.2, EN 301 489-7 V1.3.1, EN 301 489-17 V2.2.1, EN 301 489-24 V1.5.1, EN 300 328 V1.8.1, EN 301 511 V9.0.2, EN 301 908-1 V6.2.1, EN 301 908-2 V6.2.1

Product sold in the European community