

Press features description	12
Product overview	15
Install the SIM card and battery	16
Basic function	21
Write message	23
Phonebook	25
Multimedia	27
Tools	29
File manager	31
Bluetooth	31
SOS setting	33

## TO ENSURE SAFE AND PROPER USE

Please read these guidelines to avoid an illegal or dangerous use.  
For additional information please read the user manual.



### Safe turning on of the device

Do not turn on the device when use of same is not allowed or when its use may cause interferences or danger situations.



### Safety on traffic on top

Please obey local regulations, drive with both hands and strictly re-spect road safety.



### Interferences

All wireless devices may have work improperly, owing to interferences.



### Turning off when in hospital

Please obey the restriction rules and turn off the device near hospitals.



### Turning off when on flight

Please obey the relevant rules and restrictions; any interference caused by a wireless device may be dangerous.



### Turning off in service areas

Turn off wireless devices in gas station, or near chemical or inflammable stuff.



#### **Qualified service**

Only qualified staff is recommended for device installation and maintenance.



#### **Accessories and batteries**

Use only approved accessories and batteries, always use compatible devices.



#### **Impermeability**

This kind of device is not water-proof. You should keep it in dry places.



#### **Get a copy**

Remember to save one copy of any important data memorized in your device, for fear they may get lost due to unpredictable reasons.



#### **Emergency call**

Make sure network is available and the “call” feature is activated; when some network features are active, emergency call might be unavailable. So please deactivate these functions and dial the emergency number once again.

#### **GENERAL RULES FOR A SAFE USE**

- Only use batteries and battery chargers approved by the manufacturer. Use of any other product may cause losses to the battery, overheating, explosion or flame.
- Avoid crashes, shakings, or violent throws of your device.
- Do not put battery, phone or battery charger in microwave ovens or in any other high pressure device.
- Avoid to use phone in places containing explosive gas, it could not function or catch fire.

- The phone should be kept away from heat sources, do not expose it to excessive dust or humidity, which could cause malfunctions.
- Phone must be kept out of reach of children.
- Do not lay the phone on an unstable or unsmoothy surface.

#### **TIPS FOR A SAFE USE OF THE PHONE**

- Remember to switch your phone off when in hospital, in flight or in places where use of mobile is not allowed. Mobile phones could affect normal functions of electronic or medical devices; therefore please obey the concerned rules. Please make sure that your mobile phone does not switch on automatically in flight due to the “alarm” function.
- Do not use your mobile phone when the signal is weak or you are in proximity of electronic devices of high precision, particularly near aids for people with hearing disabilities, pacemakers and other medical devices, near fire alarms, car doors or other automatic control devices.
- Do not tap or hit heavily the display, it could break.

- Do not disassemble or modify the phone, it could be dangerous and may cause malfunctioning.
- Do not use needles or pen tops to tap on keyboard; this may cause a serious damage and prevent its working.
- Do not store the phone near magnetic strips, the radiations could cancel information stored in the hard disk, payment or credit cards.
- Keep the phone dry, any pouring or spilling of water or other liquids may cause an overheating, loss or bad working of the phone.
- You are requested to use suitable earphones when driving.

#### **RULES FOR SAFE USE OF BATTERY**

- Do not throw the battery into the fire, it could catch fire and explode.
- Do not weld the contacts of the battery, it might cause losses, overheating, explosion or flame.
- Should the battery liquids affect eyes, rinse them well with abundant water, do not rub with fingers and go immediately to the hospital.
- Do not disassemble or modify the battery, it could cause losses, overheating, explo

- sion or flame.
  - Do not use the battery near fire or heating devices; this could cause losses, overheating, explosion or flame.
  - Should the battery overheat, change colour or deform during its use, when it is under charge or in deposit, please stop immediately the use of same and replace it immediately.
  - Should the battery have losses or exhale bad smells, immediately remove it from heating sources, to avoid danger of fire or explosion.
  - Do not store the battery in wet conditions, this may cause overheating, smoke or erosion of the battery itself.
- Keep the battery far from places exposed to the blazing sun or at high temperatures, this may cause losses or overheating which could affect the lifespan of the battery.

#### **RULES FOR SAFE USE OF BATTERY CHARGER**

- Please use alternating current 220V; a misuse could cause losses, fire or damages to the phone and to the battery charger.
- Avoid short-circuits to the battery charger; this could cause electric discharges, smoke

- and could damage the battery charger.
- Control the battery charger does not have a damaged cable, it could cause fire and electric discharges.
- Keep the battery charger far from water holders to avoid sprinkling which could cause overheating, losses or bad working.
- Should the battery charger get wet due to water or any other liquid, immediately disconnect it from the power socket to avoid any overheating, fire, electric discharge or bad working.
- Do not disassemble or modify the battery charger, this may cause damage to person, electric discharge, fire or damages.
- Avoid to store it in places with high umidity like bathrooms; this could cause electric discharges, fire or bad working.
- Do not handle the battery charger, the power cable or socket with wet hands.
- Do not overload or modify the power cable, this could cause electric discharges or fire.
- Unplug the power cable prior to any cleaning or maintaining of your phone.
- Hold steady the battery charger when unplugging, otherwise the power cable could break and cause electric discharges or fire.

## CLEANING AND MAINTAINING

- Mobile phone, battery and battery charger are not impermeable, thus they should not be used in places with high humidity like bathrooms. Make sure the phone does not become wet under rain.
- Use a soft cloth to clean phone, battery and battery charger.
- Do not use alcohol, diluents or benzine to clean the phone.

## GENERAL TIPS

For the phone:

- do not use your mobile phone next to other phones, television, radio and electronic devices in offices

For the battery:

- store the battery in places not exposed to blazing sunlight, in fresh and windy places.
- battery has a limited lifespan; after frequent charges the charging time shortens. If the battery does not charge after several attempts, this means that it should be replaced

- with a new, specific and approved battery.
- please dispose of the exhausted batteries obeying the local laws, separately from the daily waste.

For the battery charger:

- Do not charge in the following places: under blazing sunlight, in places with temperature inferior to 5° or superior to 40°; in wet, dusty places and with vibrations which may cause bad working; near to electronic devices as TV and radios (this may damage quality of sound and images).

Keys	Function
Left soft key	Press this key to confirm the function you choose; Press this key to call out; Press to pick up phone when there is an incoming call; Press to enter call logs under standby mode.
Right soft key	Press this key to go back to previous menu; Press this key to reject a call. Power Off: Long press to power off under standby mode; Power On: Long press to power on if the phone is power off; Press this key to go back to standby screen.

UP/DOWN keys	Press these to scroll the options when browsing a function list. In edit state, press these keys to navigate. Under standby mode, press UP key to enter the specified function page. You can also customize direction keys to match the desired functions.
Number keys	Dial numbers under standby mode and enter numbers and characters in editing mode.
Key *	Under standby mode, press * key twice to display “+” to call international numbers;”P” and “W” to call extension numbers.
Key #	Under standby mode, press and hold this key to switch between general mode and silent mode.
Camera key	Long press this key to enter the Camera page.

Music & FM key	Press left of this key to enter the audio player page and press right of this key to enter the FM page.
SOS key	Long press this key to have a SOS call.

### Product overview



### Headset


Insert the headset phone when you need to use the headset to the right of the headphone jack.

### Install the SIM card and battery


Please be sure to turn off the phone before take out the battery and disconnect the phone and the charger connection.

This phone is double card double stay mobile phone, can be inserted into 2 SIM CARDS. Each SIM CARDS in a card slot commonly, insert SIM card - 1 for card 1, insert SIM - 2 CARDS for the card 2, SIM card and its contacts by scratches or bending damage easily, so be careful when using, insert or take out the SIM.

1. remove the battery cover.
2. take out the battery.

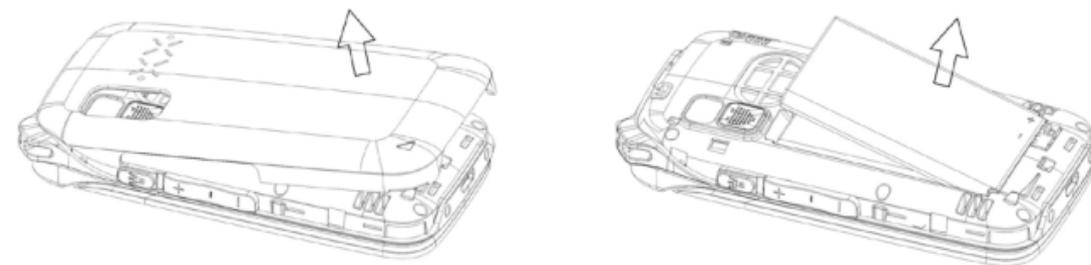

3. according to the mobile phone inside the pie chart, insert SIM card into the corresponding card slot.

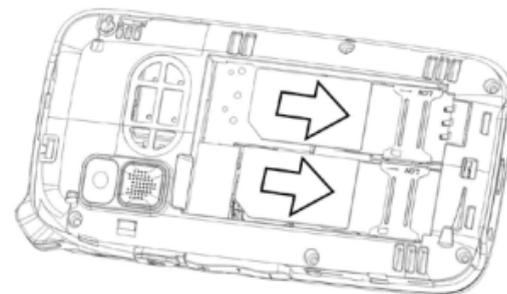

- 4.Insert the battery.
- 5.Insert the battery cover.

### **Charge the battery**

When the battery is low, mobile phone will issue a warning sound, according to deficiency of information, and a corresponding battery icon instructions. In this case, may not be able to use a mobile phone part of the function.

If the battery is too low, the mobile phone will automatically be turned off. Mobile phone battery, please.

Cellphone when charging, the battery icon will flash on the screen. Charging is completed, will be displayed on the screen with the battery icon. Phone charging, the screen will be displayed on the charging status screen. Charging is completed, the screen will be displayed on the charging tips. Standby mode, the charging time about 2 to 3 hours.

- 1.Insert the charger into the ac power socket.
- 2.Connect the charger to the phone.
- 3.In charge the symbol on the screen. (if the battery has been completely exhausted, you may need to wait for a few minutes, charging the symbol will appear on the screen.)
- 4.Charging is completed, remove the charger from the power outlet, then remove the charger

from the phone.

### **Start-up and shutdown**


In shutdown state, long press/hang up button boot.

In the boot state, long press/hang up button off.

### **Memory card**

Phone support T - Flash card (available separately), T - Flash card is a kind of multimedia memory card for mobile phone more memory. This card is small, need to be careful and cautious when install or remove, in order to avoid damage.

- 1.turn off the phone, remove battery and other external power source;
- 2.according to the mobile phone inside the pie chart, to face the T - Flash card metal, parallel insert T - Flash card slot;
- 3.when you need to take out the T - Flash card, please turn it off, take out the battery, pull T - Flash card from the card slot.

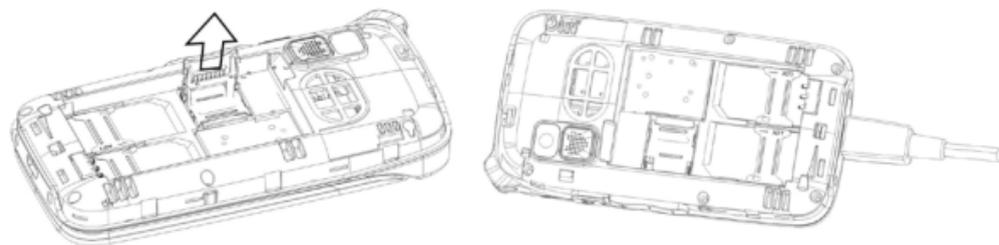

### **USB cable**

This cell phone supports USB interface, you can connect the phone to the computer via USB data line, copy, move files between mobile phone and computer operation, such as save on his mobile phone can also through the computer to browse photos, video, sound, etc.

1. Insert the plug of the USB cable phone USB interface.
2. Connect the other end of the USB cable to the computer's USB port.
3. Select the desired mode.

### **Basic function**

#### **Standby interface**

After opening, if in the main network, mobile phone will automatically choose main network connection. If is beyond the scope of this network, when the agreement allows network operators, mobile phone can use other network, called roaming.

When the network operator's logo appears on the screen, you can dial or answer the phone.

#### **Make a phone call**

There are several ways can make a phone call:

In standby mode, by pressing the [digital key], directly enter the phone number (if needed, should be combined with the country/region code and area code), to dial out.

In standby mode, by selecting the call key to dial the phone call records list recently.

In standby mode, through the long press [digital key] [2] - [9] for speed dial, automatically allocated number keys set in the position of the number.

### **Answering calls**

When the caller id for the following:

Press the left soft key answering calls. If the insert the headset, into headphones mode, can use headphones

Press the right soft key, declined to answer calls.

### **Missed calls**

In standby mode, if there is not a call, the screen will not answer the phone number and icon will be shown. You can choose according to [to see] to see not call information.

### **Messaging**

Use this function, you can write, send and receive check the SIM card 1 or 2 short information.

### **Write message**

Have a menu text messages written information.

### **SMS**

Enter text sub menu, you can edit short messages.

In the information editing interface, select [option] can carry out the following operations:

Sent to: send a short message, can enter the phone number or from number add select contact phone number to this text messages, at the same time send the interface can edit the recipient, remove the recipient, remove all recipients and saved to draft.

Input method: write information when selecting the corresponding input method.

Advanced: you can insert number, insert the name in the information.

### **Inbox**

Inbox contains a SIM card 1 and SIM card 2 SMS, service information.

Choose one short message in your inbox, press left soft key [option] can carry out the following operations:

View: Check the information content.

Reply: reply to the sender information.

Call sender: call the selected information contact number.

Forward: will the selected message forwarded to other contacts.

Delete: delete the selected message.

Delete all: delete all information.

### **Drafts**

Save not to send message.

Draft bags contain a SIM card 1 and SIM card 2 SMS.

The draft into the box, the choice of a text, press left soft key [option] can carry out the following operations.

View: Check the information.

Send: Sending to Contact

Edit: executive editor of the draft information.

Delete: delete selected in the draft of a single message.

Delete all: delete all the text in the draft.

### **Outbox**

SIM card 1 and SIM card 2 send failed message will be automatically saved in outbox.

To outbox list, select a short message, the press left soft key [option] can carry out the following operations:

View: Check the information

Resend: Resend information to contact.

Edit: short message for text editing.

Delete: delete selected a single message.

Delete all: delete all messages in the inbox.

Sent message

Voicemail server

SMS settings

### **Phonebook**

Quickly find: in the phone book list, the list below provides a search input box, here you can enter the relevant information for screening telephone records. Selection of search methods are: lowercase letters, Numbers and other input method to find. (note: press “#” key to switch input method to find the way.)

Under the address book menu, the list according to the up and down navigation keys after turning of the selected contacts, can press the dial key to call directly, or click the selected contacts but left soft key on the following:

View: to view the detailed information for the selected contact.

Send text message: send short messages to which selected contacts.

Call: execute call the contact person.

Edit: edit the contact Numbers belong to any data and to save.

Delete: delete the player machine, in SIM card 1 or 2 SIM card number.

Copy: copy the contact information to the mobile phone, SIM card, SIM card 1 or 2 as a file to save.

### **Call history**

Missed calls, Dialed calls Received calls.

Selected first to see call records, choose a contact, can press the dial key to call directly, or press/left soft key to enter [option] can be a call records for the following:

Call: contact the implementation of the selected call.

View: click the left soft key] or [determine key] into view the interface for specific information about the number.

Send text message: text messages on the selected number for operation.

Save to phonebook: for the selected number saved in the SIM and mobile phone in the phone book.

5: Delete: delete the currently selected number in the telephone records.

### **Delete call logs**

Dialed calls: delete have the phone number in the phone records

Missed calls: delete the missed call number in the phone records.

Received calls: delete have the phone number in the phone records

All calls: delete all did not receive, have to dial in the call records, had to answer the phone.

### **Multimedia**

#### **Camera**

Camera supports photographing function .you can take pictures with the embedded camera and adjust the camera settings. The camera lens is in the rear side of the mobile phone and the screen is the viewfinder window. The pictures are taken in JPG format. After downloading to PC, please view with appropriate software. If the mobile phone memory is insufficient, please delete certain pictures or other files in "Tools--File manager".

### **Image viewer**

With this function, you can select any picture and press left soft key to perform the following operations: View, Send, Use as, Rename, Delete, Storage and Image information.

### **Video recorder**

Use this function, can be video footage.press the left soft key into [option], can undertake the following actions:Camcorder settings, Video settings, White balance, Effect settings, Storage, Restore default

### **Video player**

Use this function, can play the video file on your phone or memory card.  
In the video in the list, select a video file, press/left soft key to enter options menu, can undertake the following actions:  
Play: play the video.  
Send: MMS way to send the video file.  
Rename: change the file name.  
Delete: delete the selected video file.  
Sorting method: can be in accordance with the name, type, time, size, or there is no way to

sort.

### **Audio player**

Enter Audio player. Press left soft key to enter options: Play, Add, Remove, Remove all and Settings.

### **Sound recorder**

Enter Sound recorder. press left soft key and you can do: New record, List and Settings.

### **FM radio**

To use the FM Radio, you can perform the followings operations as your need: Channel list, Manual input, Auto search, Settings and Exit.

### **Tools**

#### **Calendar**

In the main menu select into the calendar display interface, press/left soft key to enter [option] for the following:

Jump to date: enter to find after the specified date, the cursor will jump to the date quickly.

### **Alarm**

Use this feature, this phone has five alarm Settings, enter the alarm edit interface, can undertake the following actions:

Time: you can set the time.

Repeat: can choose a time, every day, the custom Settings.

### **Calculator**

This function can be a simple add, subtract, multiply and divide.

You can press the “0-9” number keys came to input Numbers; By clicking on the “#” key to enter decimal symbols; Press [the up and down or so the navigation key] to input “+ - \* ÷” sign, to have calculations; By pressing the right soft key choice/clear, can delete the latest input or results; By pressing the [sure] to select or by pressing the left soft key] “=” the result can be calculated; Without any operation, by pressing the right soft key] [return] is from the calculator.

### **File manager**

Use this function, can open the phone or memory card as a file to the following

Open

1.Open: To view details on file.

2.New folder: To establish a new portfolio in the mobile phone or memory card.

3.Rename: Name on file for operation.

4.Delete: To delete a file function operation.

Format: Mobile phones and memory card can be delete the file format

### **Bluetooth**

Use this function, can sent files, photos, music, etc to other phones

Power: can power on/off the Bluetooth

Visibility: On—indicate other phone can search the senior phone. Off—indicate other phone can't search the senior phone.

My device: can search the model of other phone

My name: show the senior phone's Bluetooth name, also can edit the name

## Settings

### Tone settings

Use this function, you can set the personality phone ring in different situations and mobile phone related prompt operation.

In standby mode, select [menu], and select the scenario model.

Into this function, display scene model list, including Ring only,vib.only,vib.and ring,vib.then ring.

### Phone settings

Under the standby interface, press [determine] to enter the main menu, then select Settings menu, in turn into the mobile phone application Settings interface. You can see the following Settings:

Time and date: you can set the time/date.

Language: used to change the language of the text displayed on the phone's screen.

Pref. input method: can set the default input method. In the edit interface by default the first law of input is the set of input.

Display: Set wallpaper, display the date time, standby operators name display Settings.

Flight mode: set the phone to flight mode or normal mode by default.

LCD backlight: set the phone's screen and screen time control.

### SOS Settings

Can be set in this number for help. Mobile phone after starting the SOS key, the machine is take the initiative to send text messages and calls to set the number for help.

- After send the SOS message, there will be a SOS single on the standby surface, indicate that the phone is under SOS. The situation will be keep on in 1 hour. Would be automatically back to normal situation if there is no incoming-call or out -call.

- Within 1 hour of SOS situation, there will be a ring remind for the first incoming call, then automatically answer and go the hands free call. SOS icon will be disappeared while the call finished. After, any new incoming calls should be press answer key to get the call.

C. Within 1 hour of SOS situation, can long-press the hang key to end the SOS.

SOS Message: is there a phone default for help information content, information content and can be edited again for help.

SOS Numbers: editable 5 emergency number.

Status: open or closed emergency call.

### **Network settings**

This section content related to your network operator, please contact your network operator. If you want to access a originally belonging to network with you don't have a roaming agreement network, mobile phone will show can make emergency calls.

Card 1/2 network choice: choose include to search, select network and search mode, press [right soft key] key search pattern choice, divided into automatic and manual two kinds, according to determine the complete set.

GPRS transfer pref.: select data and telephone preference Settings.

### **Security settings**

You can set your phone safe under the menu options, in order to avoid your phone or SIM card is used by illegal. See access password.

SIM card 1 or SIM card 2 security Settings:

1. PIN lock: according to the open, that is, each need to input PIN lock password when switched on, otherwise can't use this SIM card; When set, all need to input the correct PIN. Three input error, requires the input SIM card PUK code (individual unlock code). PUK code is used to solve and change the SIM card PIN is locked, if the SIM card PUK code please contact the operator fails to provide or missing.

2. Change the PIN: this function can change the mobile phone SIM card PIN code.

3. Change the PIN2 code: this function can change the mobile phone SIM card PIN2 code.

### **Mobile security Settings**

1. The phone locks: open the phone boot and recovery after the lock factory Settings, need to input the correct phone password, the factory default is 1122.

2. Change the password: this function can change the phone password.

Direct number: The family number can be set in 2 and 3 keys, setting saved, in the standby interface can be long press can call Numbers 2 and 3.

Connectivity

Account data: use this function, can add, edit, and delete and set as the default account associated Settings.

### **Restore settings**

This option mobile phone features can be set back to factory settings.

This function need to input the correct password to operate.

The factory default password is 1122.

## **Services**

Note: service content if there is a change in accordance with the actual shall prevail.

### **Text input**

This mobile phone with a total of three kinds of input method, uppercase and lowercase English, digital input respectively. In the text input interface, press “\*” key choice of punctuation, press “#” key to switch different input method. Can through digital keyboard for text input.

### **English uppercase**

Press “#” key choice to uppercase input method, you can according to the input of the English alphabetical order according to the corresponding number key input letters.

### **Lowercase English**

Press “#” button to choose lowercase English input method, you can want to enter the English alphabetical order according to the corresponding number key input letters or handwritten input lowercase English letters.

### **Digital input**

Press “#” button to choose digital input method, you can enter the required Numbers.



### MANUFACTURER'S LIMITED WARRANTY

This warranty does not limit the rights granted to consumers by specific national rules on consumer goods. The period of time during which this warranty is valid is limited to 24 months starting from the first date of purchase of the product. If it is used for professional purposes, the period is reduced to 12 months. During the warranty period, the national distributor Easyteck indicated at the bottom of this certificate, will, at its own expense and within a reasonable time, remove any interferences that may be encountered, and caused by manufacturing defects. Except as required by applicable law, the defects found by assistance personnel will be resolved by repair or, at the discretion Easyteck, through the replacement of the Product.

This limited warranty is only valid in the European country for which the product is intended and is the sole responsibility of the national distributor of reference for that country and which is identified in the bottom of the certificate. Some limitations in assistance services covered by this warranty may arise from the presence of specific components for a country.

Warranty referred to accessories and spare parts contained in the package

The package for the product covered by this warranty may contain accessories or spare parts that have a different warranty period since they are consumables, the warranty periods are summarized as follows:

- 24 months for cell phones
- 12 months for non-consumable accessories
- 6 months for batteries, headsets, memory cards or other.

The following are not covered by the warranty:

- The manuals and/or packaging
- User contents, configurations downloaded into the product or third party software
- Costs related to shipping the product to and from an authorized service center
- Deterioration caused by normal wear and tear including batteries
- Breakage due to accidental causes or inexperience and all damages caused by any external agent.
- Damage caused by improper use as described in the manual supplied with the product.
- All failures caused by use of non-original accessories, by viruses, or by connections to computers and networks.
- All defects caused by exposure to moisture and/or steam, from use under extreme thermal or environmental conditions or in the presence of corrosion, oxidation, food, liquid or chemical spills.

Limits of Liability:

The SIM card that is required to use the phone is provided by the phone operator and is therefore excluded from the warranty.

-This warranty is the protection given to the consumer by Easyteck through the reference dealer and is not intended to limit guarantees to the consumer which the retailer must ensure in accordance with the laws of

the different countries.

- This warranty will be honored only and exclusively at authorized service centers or at retailers that are responsible for selling Easyteck brand products.
- The terms of the Guarantee shall not be extended under any circumstances and will be effective only from the date the product is first sold to the final consumer, as certified by a valid receipt.
- The faulty parts replaced during repairs under warranty are the sole property of Easyteck and cannot be demanded by the consumer in any way.
- To the extent permitted by applicable law and in the absence of fraud, no liability is attributable to Easyteck for damages due to loss of user data caused by any defect covered by the warranty.
- The consumer, to be able to obtain the repair, must always deliver the product to the authorized service center at his own expense, devoid of any lock or security code that limits or prevents use.
- Loss of profit, losses caused by non-use of the product or loss of revenues for any direct, indirect, special or consequential damages are also excluded from the liability.
- The responsibility of Easyteck is always limited to the purchase value of the product and the consumer is always responsible for keeping a copy of the personal data and software stored in the phone's memory.
- For faults which, for the reasons listed above, are not attributable to the terms of this warranty the consumer who does not want to have the repair carried out, will be required to pay the corresponding amount requested by the service center. Easyteck shall in no way be held responsible for this request because it is not under warranty.

**CAUTION: The warranty is not valid if any attempts have been made to open or tamper with the product, including remove and/or obliterate labels and/or the IMEI code of the product.**

Distributor for Italy:

Fonex S.p.A. via dell'Artigianato 2/4 – 12040 – Sant'Albano Stura (CN)

Stamp and signature of dealer
Date of purchase

**CE 0700**



#### INFORMATION FOR USERS

**pursuant to Legislative Decree No. 49 of March 14, 2014**

**“Implementation of Directive 2012/19 / EU on Waste Electrical and Electronic Equipment (WEEE)”**

This wheeled bin symbol on the product indicates that at the end of its life must be collected separately from other waste. The user must, therefore, take the remote control integrates the essential components that got to its life to the appropriate differentiated collection centers for electronic and electro-technical waste, or return it to the dealer when purchasing a new appliance of equivalent type, in terms of one to one, or one to zero for equipment having longer side of less than 25 cm. Appropriate separate collection for the decommissioned equipment for recycling, processing and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. Illegal dumping of the product by the user entails the application of administrative sanctions stated in Legislative Decree n. Legislative Decree No. 49 of March 14, 2014.



Your product contains batteries covered by the European Directive 2013/56/EU, and that can not be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environment and health. The battery is incorporated, to be disposed at the end of the useful life of the product, it can not be removed by the user. In this case, recycling or recovery centers handle the dismantling of the product and remove the battery.

#### READ CAREFULLY AND KEEP THE INFORMATION FOR FUTURE REFERENCE

Declaration of conformity Directive RED 2014/53/EU

The company FONEX SPA declares that the product T116 complies with the essential requirements of the RED 2014/53/EU.

The declaration of conformity in complete form is available at the headquarters of FONEX SPA via dell'Artigianato 2/4 - 12040 - Sant'Albano Stura (CN)