


## INDEX

|                                    |    |
|------------------------------------|----|
| Product overview                   | 2  |
| Inserting the SIM card and battery | 4  |
| Inserting T-Flash card             | 7  |
| Make calls                         | 10 |
| Precaution and safety regulations  | 12 |
| Phonebook                          | 15 |
| Call log                           | 16 |
| Messages                           | 18 |
| Multimedia settings                | 22 |
| FM Radio                           | 23 |
| File manager                       | 28 |
| Organizer                          | 29 |
| SOS button                         | 30 |



1. Answer call
2. End call (switching ON/OFF)
3. Memory favourites numbers
4. Function button right
5. Function button left
6. Navigator
7. Keyboard
8. Torch/amplified audio
9. Volume keys
10. SOS button
11. Audio jack 3,5mm
12. Charger connector
13. Camera

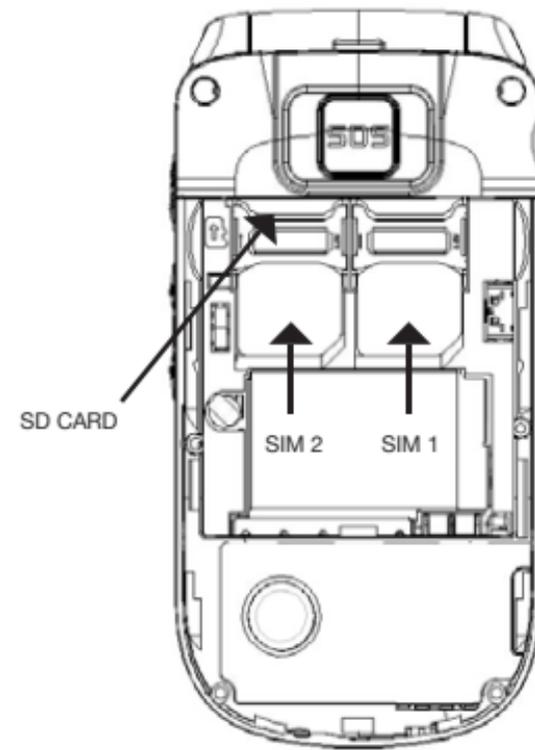

## Getting started

### 1.1 Installing the SIM Cards and the Battery

An SIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

**Note:**After powering off your mobile phone, wait for a few seconds before removing or inserting an SIM card.

**Exercise caution when operating an SIM card, as friction or bending will damage the SIM card.**

**Properly keep the mobile phone and its fittings such as the SIM cards beyond children's reach.**

#### Installation

- Hold the End key for a while to power off the mobile phone
- Push the back cover above the battery and remove it.
- Pull the left battery buckle outward and then lift the battery away.

- Insert the SIM card into the SIM card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold plate of the card facing down, till the SIM card cannot be further pushed in.

- With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place.

- Using code

The mobile phone and the SIM cards support sorts of passwords, in order to prevent the phone and the SIM cards from being misused. When you are prompted to input any of the codes mentioned below, just input the correct code and then press the ok key. If you input a wrong code, press the Right soft key to clear it and then input the correct code.

#### • PIN

The PIN (Personal identification number, 4 to 8 digits) code prevents your SIM card from being used by unauthorized people. In general, the PIN is supplied with SIM card by the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The SIM card will be locked if you input wrong PIN code for three times.

Unlocking methods as follows:

- Input the correct PUK according to the screen tips to unlock the SIM card.

- Then input the new PIN and press the ok key.
- Input the new PIN again and then press the ok key.
- If the input PUK is correct, the SIM card will be unlocked and the PIN will be reset.

**Note: The SIM card will be locked if you input wrong PIN code for three times. To unlock the SIM card, you need to input the PUK. In general, the PUK can be obtained from the network operator.**

- **PUK**

The PUK code (Personal Unlocking Key) is required to change a blocked PIN. It is supplied with SIM card. If not, contact your network operator. If you input wrong PUK code for 10 times, SIM card will be invalid. Please contact the network operator to replace the SIM card.

- **Barring code**

A barring code is required for setting the call barring function. You can obtain this code from the network operator to set the call barring function.

## **1.2 Installing T-Flash Card**

The T-Flash card is a pluggable mobile storage card inside the mobile phone. To install the T-Flash card, insert the card into the card slot.

To remove the T-flash card, take the card out.

Note:

1. The mobile phone cannot automatically identify the T-flash card being inserted when the mobile phone is powered on. You must power off the mobile phone and then power it on, so that the phone can identify the T-Flash card.
2. The T-Flash card is a miniature object. Keep it out of the reach of children for fear that children swallow it!

## **1.3 Charging the Battery**

The lithium battery delivered with the mobile phone can be put into use immediately after being unpacked.

Battery level indication:

- Your mobile phone can monitor and display the battery state.
- Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen.

- When the battery energy is insufficient, the mobile phone prompts “Battery low”. If you have set an alert tone, an alert tone will be given off when the battery level is too low.
- A charging animation appears when the battery is being charged. When the charging is complete, the animation disappears.
- Using a travel adapter:
  - Install the battery into the mobile phone before charging the battery.
  - Connect the adapter of the travel charger with the charging slot in the mobile phone. Ensure that the adapter is fully inserted.
  - Insert the plug of the travel charger to an appropriate power outlet.
  - During the charging, the battery level grids in the battery icon keep flickering till the battery is fully charged.
  - It is normal when the battery is become hot during the charging period.
  - The battery icon does no longer flicker when the charging process ends.

**Note:**

**Ensure that the plug of the charger, the plug of the earphone, and the plug of the USB cable are inserted in the right direction. Inserting them in a wrong direction may cause charging failure or other problems.**

**Before the charging, ensure that the standard voltage and frequency of the local mains supply match the rated voltage and power of the travel charger.**

**Using the Battery**

The performance of a battery is subject to multiple factors: radio network configuration, signal strength, ambient temperature, chosen functions or settings, phone fittings, and the voice, data or other application mode you choose to use.

To guarantee the optimal performance of your battery, please stick to the following rules:

- Use only the battery provided by the vendor. Otherwise, damages or even injuries could be caused during the charging.
- Power off the mobile phone before removing the battery.
- The charging process lasts a longer time for a new battery or a battery not in use for long. If the battery voltage is too low to enable the mobile phone to be powered on, charge the battery for a longer time. In this case, the battery icon does not flicker until a long time after the battery enters the charge status.
- During the charging, ensure the battery is placed in a room temperature environment or in an environment close to room temperature.

- Immediately stop using the battery if the battery produces odor, overheats, cracks, distorts or has other damage, or if the electrolyte leaks.
- The battery wears out with use. A longer charging time is required as the battery is put into use for a long time. If the total conversation duration decreases but the charging time increases even though the battery is properly charged, purchase a standard battery from the OEM or use a battery approved by our company. Using any poor-quality fittings will cause harm to your mobile phone or even incur danger!

Note: To guarantee your personal safety and protect the environment, do not litter the battery! Return the old battery to the mobile phone manufacturer or place it in specified battery reclamation areas. Do not litter any battery with other rubbish.

Warning: Short-circuits of the battery may cause explosion, fire, personal injury or other severe consequences!

#### 1.4 Dialing Calls

In the standby interface, press number keys to input the area code and the telephone number, and then press the Dial key to dial a call. To end the call, press the End key.

- **Dialing an international call**

Press the \* key twice can input “+”. Then input the country code, the area code and the

telephone number. Finally, press the Dial key.

- **Dialing a call to a number in the phonebook**

Enter the phonebook and use the up or down direction keys to find the telephone number you want to call.

Press the Dial key. The mobile phone automatically dials the chosen telephone number.

- **Redialing the last number**

In the standby interface, press the dial key to show the dialed calls.

Press the up or down direction keys to select a number you want to dial and then press the Dial key.

- **Answering incoming calls**

Press the Dial key or the Ok key to answer an incoming call.

Press the End key to end the current conversation.

To reject an incoming call, press the End key or the Right soft key.

**Note: If the caller can be identified, the mobile phone will present the calling number. If the calling number exists in the phonebook, the mobile phone will present both the name and the phone number of the caller. If the caller cannot be identified, the mobile phone will present the calling number only. You can answer an incoming call when**

**using a function list or browsing the phonebook.**

• **Using options during a conversation**

Select Options during a conversation to pause, end the ongoing call, originate a new call, browse the phonebook, view information, set the mute, set the DTMF, or perform other operations. For details, refer to the menu guide.

**1.5 Using the Headset**

It would enter headset mode automatically when you insert headset to the slot. Make sure of inserting it at the bottom of the slot, or you can't use it normally.

PS: the headset is not included in accessory.

**1.6 Safety warning and Attentions**

Safety warning

Road safety comes first

Do not use a hand-held phone while driving. Use hands-free fittings when calls are unavoidable while driving. In some countries, dialing or receiving calls while driving is illegal!

- Switch off in aircraft

Wireless devices can cause interference in aircraft. Using a mobile phone in flight is illegal and risky.

Please make sure that your mobile phone is powered off in flight.

- Switch off before entering risky areas

Strictly observe the relevant laws, codes, and regulations on the use of mobile phones in risky areas. Turn off your mobile phone before entering a place susceptible to explosion, such as an oil station, oil tank, chemical plant or a place where a blasting process is under way.

- Observe all special regulations

Follow any special regulations in force in any area such as hospitals and always switch off your phone whenever it is forbidden to use it or, when it may cause interference or danger. Properly use your mobile phone near medical apparatuses, such as pacemakers, hearing aids and some other electronic medical devices, as it may cause interference to such apparatuses.

- Accessories and batteries

Use only approved accessories and batteries.

- Use sensibly

Use only in a normal and proper manner.

## Precautions

This mobile phone is well designed with fine art. Please exercise special care when using it. The following suggestions will help your mobile phone survive the warranty period and extend its service life:

- Keep the mobile phone and all its fittings beyond children's reach.
- Keep the mobile phone dry. Keep away from rain, moisture, liquid or other substances that may corrode electronic circuits.
- Do not use or store the mobile phone in dusty places, lest that active parts of the mobile phone be damaged.
- Do not store the mobile phone in a high-temperature place. High temperature will shorten the life of electronic circuits and damage the battery and some plastic parts.
- Do not store the mobile phone in a chilly place. Otherwise, moistures will be formed inside the mobile phone to damage electronic circuits when the mobile phone is moved to a constant temperature place.
- Do not throw, knock or shock the mobile phone, as that will destroy the internal circuits and high-precision components of the mobile phone.

## 1.7 Powering On/Off the Mobile Phone

Hold the End key for a while to power on the mobile phone. A power-on animation appears on the display screen.

Input the phone lock code and press the ok key if the mobile phone prompts you to input the phone lock code. The original code is 0000.

Input the PIN and press the ok key if the mobile phone prompts you to input the PIN. The PIN is provided by the network operator for new opening SIM card.

Enter the standby interface.

To power off the mobile phone, hold the End key for a while.

## Using the menu

### 1.1 Phonebook

The mobile phone can store up to 300 telephone numbers. The number of telephone numbers that an SIM card can store depends on the storage capacity of the SIM card. The telephone numbers stored in the mobile phone and in the SIM cards form a phonebook. After selecting a telephone number in the phonebook, select Options to perform the following operations:

- **View:** View the content of the telephone number.
- **Sent text message:** sent text message to the selected number.
- **Edit:** Edit the selected number and name.
- **Delete:** Delete the telephone number from the phonebook.
- **Copy:** Duplicate the telephone number from the mobile phone to the SIM card or from the SIM card to the mobile phone.
- **Add to blacklist:** Add the selected number to blacklist.
- **Phonebook settings:** Extra numbers, Human Voice and Memory Status

## 1.2 Call Logs

### Call history

#### Missed Calls

You can view a list of the latest missed calls.

Note: When the mobile phone indicates that some calls are missed, you can select Read to enter the missed calls list. Navigate to a missed call and then press the Dial key to dial the number that originated that call.

#### Dialed Calls

You can view the latest dialed calls. Choose dialed calls and then select a dialed call to delete, save, dial, or edit (or send a short message to it).

#### Received Calls

You can view the latest received calls. Choose received calls and then select a received call to delete, save, dial, or edit (or send a short message to it).

#### Delete call logs

You can delete the latest call records. Choose Delete call logs and then select to delete all the numbers in the call history, or delete only the numbers in the missed calls list, the dialed calls list or the received calls list.

### Call settings

Master/ Slave SIM call settings

- **Call waiting:** Open or close this function; choose query to check the current state of it.
- **Call divert:** It includes five different situation, including Divert all voice calls, Divert if unreachable, Divert if no answer, Divert if busy and Divert all data calls; select Cancel all diverts can let all of them deactivated.
- **Call barring:** Restrict the numbers which you will dial or receive.

- Line switching: Choose line1 or line2.

#### **Advanced settings**

- Blacklist: Open or close this function: add numbers to blacklist
- Auto redial: After open this function, the phone will dial the number again automatically every time when the out call fails or be rejected.
- Call time reminder: You can set the call time reminder mode as Single or periodic; select Off to cancel this function.
- Answer mode: Set the answer mode, Any key or Auto answer when headset mode, as On or Off.

Attention: Parts of the functions need network operator's support.

### **1.3 Messages**

The phone supports Short Messaging Service (SMS). You can send text messages and manage the messages that you sent and received.

In the message, select the option to see operate the other new menu.

### **Write message**

#### **New SMS**

In this menu, you can edit and send new messages. The characters for every message can be up to160.The operations for editing messages are as follows:

#### **Inbox**

In the inbox, you can store all the received text messages, and it will display the names of the senders. In the case that the sender is not included in the phonebook, it will display the telephone number of the sender.

The options for a single message include: reply, delete, Call, etc.

- Reply: Reply the short message
- Delete: Delete the short message.
- Call sender: Call the number in the short message.
- Mark: Mark the current message or mark all.

You cannot receive new messages if the memory for messages is full. Delete unnecessary messages.

#### **Drafts**

Choose the completed Messages, press the up key and the down key to select and press the

left softkey to enter the Options.

- Send: send this message
- Edit: edit the current selected message.
- Delete: delete this message
- Delete: delete all message

### **Outbox**

Send in sending messages and failed message will be saved in the Outbox.

### **Sent messages**

Check all messages has sent.

SMS settings

Message settings

### **Master SIM**

SMSC address:

Delivery report: You can set whether to send delivery report.

Reply path: on or off

Voicemail server: Dial the voice mail number to access your voice mail. The number is provided by your network operator. With the voice mailbox menu, you can carry out the following

operations.

### **Slave SIM**

SMSC address:

Delivery report: You can set whether to send delivery report.

Reply path: on or off

Voicemail server: Dial the voice mail number to access your voice mail. The number is provided by your network operator. With the voice mailbox menu, you can carry out the following operations.

- Memory status: Show phone or SIM card memory capacity.
- Save sent message: on or off
- Preferred storage: Set to save short messages to the SIM card or to the phone.

Please refer to Inbox for other operations.

## 1.4 Multimedia

### Camera

The phone is provided with a camera, which supports the photographing functions. Roll the phone to align the camera to the picture and then press OK key to capture photos. Pictures will be saved in the file system of the phone or the memory card. In the capture interface, you can press up or down direction key to zoom in and zoom out; left or right direction key to make EV(-2.0 to +2.0).

### Image Viewer

You can view the pictures or images through this function.

### Video recorder

This function enables you to record dynamic pictures. In the capture interface, press the left key to switch to video recorder, OK key to capture videos clip.

### Video player

Use this function to play video files. By pressing the direction key you can control the playing process of video player: play/pause(OK key), fast forward (press and hold right direction key) and rewind (press and hold left direction key). In video player interface, you can press \*# key or side button to adjust volume.

### Audio player

Use this function to play audio files. By pressing the direction key can you control the playing process of audio player: play/stop (OK key), switch to last song/next song (press left or right direction key). In audio player interface, you can press \*# key or side button to adjust volume; press up key to change playing sequence.

### Sound recorder

After accessing the sound recorder, you can press left soft key to perform the following operations:

- New record: select this function to record a new file.
- List: recorded files are listed in this menu.
- Settings: Through this function, you can set storage position and format for record files.

### FM radio

You can use the application as a traditional FM radio with automatic tuning and saved channels. In FM radio interface, you can press OK key to play or stop; press left or right key to auto search; press \*# key or side button to adjust volume; press up or down key to search channels.

## 1.5 Settings

### Boost Setting

Switch the boost on or off by the menu. Also, BOOST KEY is the same.

### Profiles

The mobile phone provides multiple user profiles, so that you can customize some settings to adapt to the specific events and environments.

Customize the user profiles according to your preference and then activate the user profiles.

The user profiles fall into four scenarios: General, Silent, Meeting and Outdoor.

When you insert an earpiece to the mobile phone, the mobile phone automatically enters the Headset mode.

### Multi SIM switch

Choose Manually selected or Automatical decided by SIM cards

### Multi SIM settings

Choose Multi SIM open, Only master open or Only Slave open

### Phone Settings

Time and date: set home city, Set time/date, Set time and date format.

**Note: If you remove the battery from the mobile phone or if the battery energy was exhausted a long time ago, you may need to reset the date and time when re-inserting the battery or powering on the mobile phone after recharging.**

### Auto power on/off

Set the time when the mobile phone will be automatically powered on or off.

### Language

Select the display language for the mobile phone.

### Pref. input method

Select input method as needed.

### Display settings

Users can access this item to set wallpaper, screen saver, power on/off display, etc.

### Setting Sub-lcd clock

change to Analog or White Digit Clock.

### Show time and date

on or off to show time on the display

### Dedicated keys

Customize the shortcut functions of the Up, Down, Left, and Right direction keys. In the

standby interface, you can press a direction key to directly enter the function menu corresponding to that direction key.

#### **Greeting text**

You can choose to boot on / off greeting.

#### **Flight mode**

When this function is engaged, it will suspend many of the device's signal transmitting functions – thereby disabling the device's capacity to place or receive calls or text messages– while still permitting use of other functions that do not require signal transmission (e.g. games, built-in camera, MP3 player.)

#### **Misc.settings**

Can set LCD backlight and time

#### **Network settings**

For Master and Slave SIM: network selection by Automatic or Manual

#### **Security Settings**

This function provides you with related settings about safety use

**PIN lock:** To activate PIN lock, you need to input the correct PIN code. If you set PIN lock to On, you need to input the PIN each time you power on the mobile phone. In the case you

input a wrong PIN for three consecutive times, you need to input the PIN Unlocking Key (PUK). The PUK is used to unlock and change the locked PIN. To obtain the PUK, contact the network operator.

**Change PIN:** To change PIN code of SIM card.

**Change PIN2:** To change PIN2 code of PIN code.

**Screen auto lock:** choose off, 15secs, 30secs, 1 min and 5mins to make screen auto lock.

#### **Phone security**

1) **Phone lock:** The function enables you to lock/unlock the phone. Entering password to switch on or off the phone. Password is required when the phone is locked. The password is 4 to 8 digits.

2) **Change password:** to change phone password.

#### **Connectivity**

1) **Bluetooth:** With Bluetooth, you can make a wireless connection to other compatible devices, such as mobile phones, computers, headsets and car kits. You can use the Bluetooth to send images, video clips, music, sound clips and notes, and transfer files from your compatible pc.

**Restore factory settings**

Use this function to restore factory settings, the preset password is 1122.

Sound effects

Choose to make it Equalizer or off.

### **1.6 File manager**

The phone provides a certain space for users to manage files and supports the Memory card. The capacity of the Memory card is selectable. You can use the file manager to conveniently manage various directories and files on the phone and the Memory card.

- Open: Choose File manager to enter the root directory of the memory. The root directory will list the default folders, new folders and user files. When the mobile phone is powered on for the first time or when you have not changed the directory, the root directory contains the default folders only.
- Format: You can use this function to format all the data in the memory. The system will re-create a default folder. The formatted data cannot be recovered. Therefore, think twice before using the formatting function.

### **1.7 Organizer**

#### **Speed dial**

Choose to open or close this function, you can re-set 8 mobile phone numbers from button 2 to 8, when long time press the button, it will call the number pre-set.

#### **Calendar**

Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc. Days with events entered will be marked.

#### **Calculator**

The calculator can add, subtract, multiply and divide.

#### **Alarm**

Five alarm clocks are set but deactivated by default. You can activate one, multiple or all of them as needed. For each alarm clock, the ringing date and the ringing time can be set.

#### **Electric Torch**

You can make the torch on or off here.

#### **Bluetooth**

Power: Open or close the function of Bluetooth

Visibility: Open or close the function of visibility.

My device: Following this, you can search new Bluetooth devices. The difference between My device and Inquiry audio device is: the hands-free of Bluetooth devices can only receive data, such as Bluetooth earphone; My device can receive and send data, such as Bluetooth cell phone.

Search audio device: when it is on, it will search audio device.

My name: View the name of the Bluetooth in this phone

## 1.8 SOS button

- SOS number: you can set up to 5 numbers for SOS calls. The telephone will automatically call these 5 numbers when SOS function activated.
- Familiarity Number: From this menu, you are encouraged to select three numbers from your phone book. After this, you can make call to these numbers simply by long press M1 or M2 and M3 keys in the idle screen.
- SOS Message: You can edit the message by default for SOS to sent to someone.
- SOS Wait Time: “ Call Now”, “ Call Wait 5S” “ Call Wait 10S”

**As default the first SOS number is called the 112.**

**E ‘can still delete it and enter a new personal number.**

**Info SOS Alarm: attention to including numbers with automatic response or with voice, as the alarm sequence is interrupted by answering the call.**

## Useful information

### Cover answer

Menu=>call logs=>call settings=>advanced settings=>answer mode=>cover answer

### Right side button (above the volume button)

Pressing this button can turn on / off mode Very Loud Volume - pressing this button for 2 seconds can activate / deactivate the torch

### Activate human tone keyboard

Menu=>Settings=>Profiles=>General=>Options=>Customize=>scroll to Keypad=>Options=>Change=>Human Tone Tone=>OK=>Options=>Save

### **Speed Dial**

You can set favourite numbers from 2 to 9. This function is activated and the numbers must be present in your Contacts

Menu=>Organizer=>Speed dial=>Set Number=>Edit=>select the key to assign the number to select the number of the section=>OK

### **Storing SOS numbers**

Menu=>SOS=>Number SOS=>set first SOS number=>press navigation key (down)=>set the second number.. continue until you set 5 SOS numbers

### **Storing M1/M2/M3 (familiarity numbers)**

Menu=>SOS=>scroll to Familiarity Numbers=>set the desired numbers; after setting the first number press navigation key (down) to set M2

In this phone the SOS option is always active, to disable this function follow:

Menu=>SOS=>SOS Number=>delete the number SOS .. =>Options=>Save .. SOS procedure will not be activated

When I switch off and on the phone automatically 112 will be set to disable SOS please

proceed as above

### **Dedicated keys to activate follow**

Menu=>Settings=>Phone Settings=>Dedicated keys=> .. I can select which function to activate by pressing the navigator key (left/right/up/down)



## MANUFACTURER'S LIMITED WARRANTY

This warranty does not limit the rights granted to consumers by specific national rules on consumer goods. The period of time during which this warranty is valid is limited to 24 months starting from the first date of purchase of the product. If it is used for professional purposes, the period is reduced to 12 months. During the warranty period, the national distributor Easyteck indicated at the bottom of this certificate, will, at its own expense and within a reasonable time, remove any interferences that may be encountered, and caused by manufacturing defects. Except as required by applicable law, the defects found by assistance personnel will be resolved by repair or, at the discretion Easyteck, through the replacement of the Product.

This limited warranty is only valid in the European country for which the product is intended and is the sole responsibility of the national distributor of reference for that country and which is identified in the bottom of the certificate. Some limitations in assistance services covered by this warranty may arise from the presence of specific components for a country.

Warranty referred to accessories and spare parts contained in the package

The package for the product covered by this warranty may contain accessories or spare parts that have a different warranty period since they are consumables, the warranty periods are summarized as follows:

- 24 months for cell phones
- 12 months for non-consumable accessories
- 6 months for batteries, headsets, memory cards or other.

The following are not covered by the warranty:

- The manuals and/or packaging
- User contents, configurations downloaded into the product or third party software
- Costs related to shipping the product to and from an authorized service center
- Deterioration caused by normal wear and tear including batteries
- Breakage due to accidental causes or inexperience and all damages caused by any external agent.
- Damage caused by improper use as described in the manual supplied with the product.
- All failures caused by use of non-original accessories, by viruses, or by connections to computers and networks.
- All defects caused by exposure to moisture and/or steam, from use under extreme thermal or environmental conditions or in the presence of corrosion, oxidation, food, liquid or chemical spills.

Limits of Liability:

The SIM card that is required to use the phone is provided by the phone operator and is therefore excluded from the warranty.

-This warranty is the protection given to the consumer by Easyteck through the reference dealer and is not intended to limit guarantees to the consumer which the retailer must ensure in accordance with the laws of

the different countries.

- This warranty will be honored only and exclusively at authorized service centers or at retailers that are responsible for selling Easyteck brand products.
- The terms of the Guarantee shall not be extended under any circumstances and will be effective only from the date the product is first sold to the final consumer, as certified by a valid receipt.
- The faulty parts replaced during repairs under warranty are the sole property of Easyteck and cannot be demanded by the consumer in any way.
- To the extent permitted by applicable law and in the absence of fraud, no liability is attributable to Easyteck for damages due to loss of user data caused by any defect covered by the warranty.
- The consumer, to be able to obtain the repair, must always deliver the product to the authorized service center at his own expense, devoid of any lock or security code that limits or prevents use.
- Loss of profit, losses caused by non-use of the product or loss of revenues for any direct, indirect, special or consequential damages are also excluded from the liability.
- The responsibility of Easyteck is always limited to the purchase value of the product and the consumer is always responsible for keeping a copy of the personal data and software stored in the phone's memory.
- For faults which, for the reasons listed above, are not attributable to the terms of this warranty the consumer who does not want to have the repair carried out, will be required to pay the corresponding amount requested by the service center. Easyteck shall in no way be held responsible for this request because it is not under warranty.

**CAUTION: The warranty is not valid if any attempts have been made to open or tamper with the product, including remove and/or obliterate labels and/or the IMEI code of the product.**

Distributor for Italy:

Fonex S.p.A. via dell'Artigianato 2/4 – 12040 – Sant'Albano Stura (CN)

|                               |
|-------------------------------|
| Stamp and signature of dealer |
| Date of purchase              |

**C € 0700**



#### **CORRECT DISPOSAL OF THE PRODUCT INFORMATION FOR USERS**

pursuant to Article 13 of the Legislative Decree of 25 July 2005, No. 151 “Implementation of Directives 2002/95/EC, Directive 2002/96/EC and 2003/108/EC on restricting the use of hazardous substances in electrical and electronic equipment and the disposal of waste”

The symbol of the crossed-out dustbin shown on the equipment or on the packaging indicates that the product, at the end of its useful life, must be collected separately from other waste. The recycling of this equipment at the end of life is organized and managed by the manufacturer. The user who wishes to dispose of this equipment should contact the manufacturer and follow the system that it has adopted to allow for the separate collection of at end of life. Appropriate separate collection in order to send old equipment for compatible recycling, treatment and disposal helps to prevent potential negative effects on the environment and on health and promotes the reuse and/or recycling of the materials of which the equipment is composed. Illegal disposal of the product by the owner will result in the application of administrative penalties provided by law.



#### **CORRECT DISPOSAL OF PRODUCT BATTERY**

(Applicable in THE European Union and other European countries with separate battery collection systems)

The marking on the battery or on documentation or packaging indicates that the battery in this product should not be disposed of with other household waste at the end of the life cycle.

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead in quantities above the levels referred to in the EU Directive 2006/66.

If the battery is not properly disposed of, these substances can cause harm to human health or the environment.

Declaration of conformity:

We hereby declare that the product T09/T119-T119R-T119W has been tested by Phoenix testlab and has passed the standards required by the following EMC Directive 1999/5/EC for the following specifications: EN 60950-1:2006+A11:2009+A1:2010+A12:2011, EN 62209-1:2006, EN 62209-2:2010, EN 50360:2011+A1:2012, EN 50566:2013, EN 62479:2010, EN 301 489-1 V1.9.2, EN 301 489-7 V1.3.1, EN 301 489-17 V2.2.1, EN 301 511 V9.0.2, EN 300 328 V1.8.1

Product sold in the European community