

Installing the battery and SIM card	6
Product overview	7
Messages	8
Phonebook	10
Call settings	12
Multimedia	13
FM radio	16
SOS setting	17
Organizer	24
Bluetooth	25

## TO ENSURE SAFE AND PROPER USE

Please read these guidelines to avoid an illegal or dangerous use.  
For additional information please read the user manual.



### Safe turning on of the device

Do not turn on the device when use of same is not allowed or when its use may cause interferences or danger situations.



### Safety on traffic on top

Please obey local regulations, drive with both hands and strictly re-spect road safety.



### Interferences

All wireless devices may have work improperly, owing to interferences.



### Turning off when in hospital

Please obey the restriction rules and turn off the device near hospitals.



### Turning off when on flight

Please obey the relevant rules and restrictions; any interference caused by a wireless device may be dangerous.



### Turning off in service areas

Turn off wireless devices in gas station, or near chemical or inflammable stuff.



#### **Qualified service**

Only qualified staff is recommended for device installation and maintenance.



#### **Accessories and batteries**

Use only approved accessories and batteries, always use compatible devices.



#### **Impermeability**

This kind of device is not water-proof. You should keep it in dry places.



#### **Get a copy**

Remember to save one copy of any important data memorized in your device, for fear they may get lost due to unpredictable reasons.



#### **Emergency call**

Make sure network is available and the “call” feature is activated; when some network features are active, emergency call might be unavailable. So please deactivate these functions and dial the emergency number once again.

**CAUTION: Lithium battery. Risk of explosion if the battery is replaced by an incorrect type.**

## Installing the battery and the sim card

- 1.Remove the battery cover and the battery.
- 2.Insert the Sd card by carefully sliding into the holder (not mandatory).
- 3.Insert the SIM card by carefully sliding into the holder. Make sure the SIM card's contacts are facing inwards.
4. Insert the battery, sliding it into the battery compartment
5. Install the battery cover again

Read carefully this manual before using the device for the first time.  
Keep this guide in a safe place for future usage

## Product overview



## Messages

### Write and send SMS messages

1. Press Menu, go to Messages and press OK.
2. Select Write message and press OK.
3. Write the SMS text.

If necessary, press “\*” to select symbols. Press Options to insert the SMS’s receiver.

### Inbox

1. Press Menu, go to Messages and press OK.
2. Select Inbox and press OK.
3. Select a message from the list and choose Options -> View to read the message.

Other options are:

Reply

Enter the message and send it to the person who sent it

Call sender

Choose Select to call the sender.

Forward

Enter in message modify mode; select Option □ Send to in order to select the contact you need to send the message to.

Delete

Choose Select to delete the message.

Delete all

Delete all the SMS stored in the memory.

### Drafts

In this menu you can manage the draft messages.

### Outbox

This menu relates to the management of outgoing messages, which the phone is trying to send, but not yet sent

### Sent messages

Sent messages management

### **SMS settings**

Here you can check the status of the phone memory and define the memory where to save messages (SIM card or phone memory)

### **Phonebook**

#### **Adding a new contact**

1. Press Menu, select Phonebook and press OK.
2. Select Add new contact and press Options.
3. Premere Select to choose whether to save To Phone or to SIM.
4. Insert name and number.
5. Choose Options and decide whether to Save the contact or Cancel the operation.
6. Press  to go back to main screen.

Note: Press  to insert the International prefix + (ie. +39 for Italy)  
Always add “+” before the phone number to make an International call

### **Making a phone call**

1. In the main screen, write the telephone number using the numbers in the keypad; In case of error, select Clear.
2. Press  to make the phone call and  to stop the call.

#### **Calling from the Phonebook**

1. In the main screen, press Menu -> Phonebook to go to the contact list.
2. Use the arrows to scroll through the names in the directory, or press the first letter of the name to quickly search
3. Press  to call the selected contact.

#### **Call center**

All the phone calls managed by the phone are saved in the call center.

#### **Call history**

1. Press Menu, go to Call Center and press OK.
2. Select Call history and press OK.
3. Here you can see and manage all the calls:

Missed  
Dialed  
Received  
All calls

### **Call settings**

1. Press Menu, go to Call Center and press OK.
2. Select Call settings and press OK.
3. Here you can activate or cancel the following functions:  
Call waiting  
Call divert  
Call barring
4. On the Advanced settings menu, it is possible to manage the following functions:

Auto redial  
Press OK to select the ON/OFF status.  
Call time reminder

Press OK and Select Off, Single or Periodic in order to see the call duration.  
Answer mode

Press OK to activate the answer key with any key or set up automatic reply when using headphones .

“Cover answer” means that you can answer the calls opening the cover of your phone.

### **Multimedia**

#### **Camera**

1. Press Menu, go to Multimedia and press OK to open the Camera.
2. Use the Arrow buttons to increase or decrease the zoom level
3. Take the picture pressing on the button number “5”
4. To save videos, press on the button number “0” or Options -> Switch to video recorder to go to video recorder mode

**NOTE: To save video, it is necessary to insert a memory card on the phone**

Pressing the “Options” menu in camera mode and choosing “Camera settings”, it is possible to select the scene mode “Night” or manage the Delay Timer, which is the number of seconds in which the picture is taken, after pressing the number “5” .

### **Image Viewer**

You enter here to the list and manage images saved in the phone memory or SD card. From the list, select Options -> View, then press the numbers “4” or “6” to surf all the saved images.

### **Video Player**

Enter this menu to play videos recorded with the video camera. Select the file to play, then choose Options -> Play. To play the videos, press the button “5”; press the same button to stop it. Press “6” or “4” for fast forward or rewind.

**NOTE: The video player automatically displays the videos stored in VIDEOS directory of the SD card.**

The system can play videos saved on your phone, and it is not guaranteed to play other video formats from other sources.

### **Audio Player**

Enter this menu to play audio files (eg MP3). To add files to playlist, go to List, then Options -> Add and choose the audio files in the folders on your phone or memory card. To play the videos, press the button “5”; press the same button to stop it. Press “6” or “4” for fast forward or rewind.

### **Sound recorder**

#### **Sound recording**

- 1.Press Menu and go to Multimedia, press OK afre choosing Sound recorder.
- 2.Select Options -> New record to create a new audio recording. Press STOP to save it.
- 3.Select Options -> List to see all the saved recordings, then Options -> Play to listen to the chosen file.

From this menu, you can select the recording as Ringtone (Select “Use as”)

4.Go to Options -> Settings to define the audio quality and the storage where to save the files

### **FM Radio**

- 1.Press Menu, go to Multimedia and press OK after selecting FM Radio.
- 2.From the Radio screen, press the up / down arrows to change the frequency manually; press the number “6” to automatically search for the next frequency, and the numeric key “4” to search for the previous
- You can adjust the volume pressing the buttons “\*” and “#”.
- 3.Press Options to see the saved Radio channels
- 4.Select Manual Input to insert manually the desired frequency.
- 5.Select Auto Search to search automatically the radio channels and save them in the list.
- 6.Go to settings to define the background play On or Off (i.e., when you go out from the FM Radio Menu)

### **SOS setting**

- 1.Press Menu and go to SOS Setting.
- 2.Select SOS switch setting to activate or delete the SOS setting (when you press the SOS button on the back of the phone).
- 3.Select SOS number to define the numbers to call or send SMS; you can choose up to 5 numbers.
- 4.Select SOS message to choose whether to send the SMS SOS message and modify its text. After pressing the SOS button, SMSs are sent to all the numbers entered on the SOS numbers (if the function has been activated) and calls are made to the numbers in the order defined in the previous menu, until the first answer
- 5.Select Alarm Sound to select whether the sound signal is issued or not when you press the SOS button
- 6.Low Battery reminder: an SMS can be sent when the phone battery gets low.

### **SETTINGS**

All the main phone configurations can be set up under this menu.

### **Boost**

- 1.Press Menu and go to Settings.
- 2.Select Boost and press OK.
- 3.Activate or delete the extra volume (higher volume) during phone calls.

### **Family numbers**

M1 and M2 buttons can be used to make quick phone call sto predefined numbers.

To add numbers to be called pressing M1 or M2 buttons:

- 1.Press Menu and go to Settings.
  - 2.Select Family numbers and press OK.
  - 3.Activate the function (Status ON) and select Number setting.
  - 4.Select 1 (corresponding to M1 button) and press Option, after that you can choose the telephone number from the Phonebook or insert it manually.
  - 5.At this point, pressing the M1 key, a phone call will be made to the phone number here specified.
- Select 2 to to modify the number associated to the button M2.

### **User Profiles**

- 1.Press Menu and go to Settings.
- 2.Select User Profiles and press OK. The basic profiles are the following:  
General  
Silent  
Meeting  
Outdoor

For every profile, you can set up the ringtones for power on/off, call ringtone, etc.

- 2.Select General and press Options.
- 3.Select Customize and press Select.
- 4.Select Alert type and press Options in order to Select Ring Only, Vibration only, Vibration and Ring or Vibration and then ring. Press OK to save.
- 5.Go to Ring type and press Options to decide if the ringtone must be repeated until the answer, or only once.
- 6.Go to Ringtone and press Options to select the desired ringtone.
- 7.Go to Ringtone Volume and press Options; use the arrows to increase or decrease the ringtone volume, and press OK to save.

- 8.Go to Message and press Options to select the preferred tone for the coming SMS.
- 9.Go to Keypad and press Options, to define if after pressing any key, a sound will be produced, a click, or a voice with the number announcement; press OK to choose the desired option
- 10.Go to Keytone volume and press Options; use the arrows to increase or decrease the volume, and press OK to save.

When all modifications are made, select Options -> Save to save the modifications.  
All the other profiles can be modified in the same way.

#### **Phone settings**

- 1.Press Menu and go to Settings.
- 2.Select Phone settings and press OK.

Following the possible settings:

#### **Date and time**

- 1.Select Set home city and choose your relevant city.

- 2.Select Set time/date and press OK to change date and time.
- 3.Select Set format and press OK to decide the time format (12 or 24 hours) and the date (ie, DD/MM/AAAA).

#### **Language**

- 1.Select Language and press OK.
- 2.Use the arrows to choose your Language from the list and press OK.

#### **Input method**

- 1.Select Pref.input method and press OK.
- Use the arrows to choose your preferred input method and press OK .

#### **Display**

- 1.Select Display, and go to Wallpaper.
- 2.It is possible to select a wallpaper from the system default, the phone memory or the SD card.
- 3.Set the screen Auto lock, which means the time after which the keypad should be locked; the keypad can also be manually locked, pressing the “End call” button from the main screen.

4. Select LCD backlight to define the screen brightness and the date and time shown on the phone main screen.
5. Select Show date and time to choose whether to select date and time on the main screen.

### **Dedicated keys**

Here you can assign special functions to the arrows up and down keys.

1. From the Phone settings menu, choose Dedicated keys and press OK.
2. Select “Up” to choose the action associated with Arrows up button, and then Edit to set the action; for the Arrows down button, you can do a similar configuration by selecting “Down”.

### **Flight mode**

Here you can activate the flight mode, when you are on a plane. The flight mode removes all network connections on the phone.

### **Incoming call report**

Here you can turn on the pronunciation of the phone numbers of the caller; when an incoming call arrives, the device will speak one by one the numbers of the calling telephone.

### **Security settings**

1. From the Phone settings menu, choose Security settings and press OK  
The following menus will appear:

#### **A. SIM security**

Here you can set the phone is locked by the SIM PIN. SIM PIN can also be changed.

#### **B. Phone security**

Here you can set a phone password, which is required when the device turns on. The initial password is 1122 and can be changed at will.

### **Restore Factory settings**

1. From the Phone settings, choose Restore factory settings and press OK.  
Press OK and insert the password (Initial Password: 1122) to restore the phone to initial settings; all the personal settings will be deleted.

## **File manager**

From this menu you can manage the files on the SD card and on the phone memory.

- 1.Press menu, go to File Manager and press OK.
- 2.Select Phone or SD card to manage the files in the chosen memory.

**Warning: the SD Card menu opens only if the memory card is inserted in the phone (memory card not included).**

## **Organizer**

### **Calendar**

- 1.Press Menu and go to Organizer, Select Calendar and press OK.  
The screen moves to today's date.
- 2.Press Options to go to Jump to date – insert the date and press OK to go to the decided date.

## **Calculator**

- 1.Press Menu and go to Organizer, Select Calculator and press OK.

- 2.Insert the first number and if necessary use the button “#” to insert the decimal points.
- 3.Use the arrow buttons to select the operation ( + - \* ÷).
- 4.Insert the next number and press OK. The result will be shown on the screen.

## **Alarm**

- 1.Press Menu and enter into Organizer, Select Alarm and press OK.
- 2.Press Edit to Select the status On/Off.
- 3.Insert the alarm time using the numbers on the keypad
- 4.Select the repeat time and the Alarm Tone.
- 5.Press Save to activate the alarm; press the red button not to save the modifications.

## **Bluetooth**

- 1.Press Menu and go to Organizer, select Bluetooth and press OK.
- 2.Power: Select On or Off to activate or close the Bluetooth.
- 3.Visibility: Select On to make the phone visible to other BT devices.
- 4.My device: Possibility to add other BT devices.
- 5.My name: Bluetooth name of your phone.



### MANUFACTURER'S LIMITED WARRANTY

This warranty does not limit the rights granted to consumers by specific national rules on consumer goods. The period of time during which this warranty is valid is limited to 24 months starting from the first date of purchase of the product. If it is used for professional purposes, the period is reduced to 12 months. During the warranty period, the national distributor Easyteck indicated at the bottom of this certificate, will, at its own expense and within a reasonable time, remove any interferences that may be encountered, and caused by manufacturing defects. Except as required by applicable law, the defects found by assistance personnel will be resolved by repair or, at the discretion Easyteck, through the replacement of the Product. This limited warranty is only valid in the European country for which the product is intended and is the sole responsibility of the national distributor of reference for that country and which is identified in the bottom of the certificate. Some limitations in assistance services covered by this warranty may arise from the presence of specific components for a country.

Warranty referred to accessories and spare parts contained in the package

The package for the product covered by this warranty may contain accessories or spare parts that have a different warranty period since they are consumables, the warranty periods are summarized as follows:

- 24 months for cell phones

- 12 months for non-consumable accessories
- 6 months for batteries, headsets, memory cards or other.

The following are not covered by the warranty:

- The manuals and/or packaging
- User contents, configurations downloaded into the product or third party software
- Costs related to shipping the product to and from an authorized service center
- Deterioration caused by normal wear and tear including batteries
- Breakage due to accidental causes or inexperience and all damages caused by any external agent.
- Damage caused by improper use as described in the manual supplied with the product.
- All failures caused by use of non-original accessories, by viruses, or by connections to computers and networks.
- All defects caused by exposure to moisture and/or steam, from use under extreme thermal or environmental conditions or in the presence of corrosion, oxidation, food, liquid or chemical spills.

Limits of Liability:

The SIM card that is required to use the phone is provided by the phone operator and is therefore excluded from the warranty.

- This warranty is the protection given to the consumer by Easyteck through the reference dealer and is not intended to limit guarantees to the consumer which the retailer must ensure in accordance with the laws of the different countries.

- This warranty will be honored only and exclusively at authorized service centers or at retailers that are responsible for selling Easyteck brand products.
  - The terms of the Guarantee shall not be extended under any circumstances and will be effective only from the date the product is first sold to the final consumer, as certified by a valid receipt.
  - The faulty parts replaced during repairs under warranty are the sole property of Easyteck and cannot be demanded by the consumer in any way.
  - To the extent permitted by applicable law and in the absence of fraud, no liability is attributable to Easyteck for damages due to loss of user data caused by any defect covered by the warranty.
  - The consumer, to be able to obtain the repair, must always deliver the product to the authorized service center at his own expense, devoid of any lock or security code that limits or prevents use.
  - Loss of profit, losses caused by non-use of the product or loss of revenues for any direct, indirect, special or consequential damages are also excluded from the liability.
  - The responsibility of Easyteck is always limited to the purchase value of the product and the consumer is always responsible for keeping a copy of the personal data and software stored in the phone's memory.
  - For faults which, for the reasons listed above, are not attributable to the terms of this warranty the consumer who does not want to have the repair carried out, will be required to pay the corresponding amount requested by the service center. Easyteck shall in no way be held responsible for this request because it is not under warranty.
- CAUTION: The warranty is not valid if any attempts have been made to open or tamper with the product, including remove and/or obliterate labels and/or the IMEI code of the product.**

Stamp and signature of dealer
Date of purchase

CE 2200

Product sold in the European community  
 Manufactured by Fonex S.p.A. via dell'artigianato 2/4 Sant'Albano Stura (CN)  
 MADE IN CHINA



to avoid possible hearing damage, limit the amount of time listening at high volumes



#### INFORMATION FOR USERS

**pursuant to Legislative Decree No. 49 of March 14, 2014**

**“Implementation of Directive 2012/19 / EU on Waste Electrical and Electronic Equipment (WEEE)”**

This wheeled bin symbol on the product indicates that at the end of its life must be collected separately from other waste. The user must, therefore, take the remote control integrates the essential components that got to its life to the appropriate differentiated collection centers for electronic and electro-technical waste, or return it to the dealer when purchasing a new appliance of equivalent type, in terms of one to one, or one to zero for equipment having longer side of less than 25 cm. Appropriate separate collection for the decommissioned equipment for recycling, processing and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. Illegal dumping of the product by the user entails the application of administrative sanctions stated in Legislative Decree n. Legislative Decree No. 49 of March 14, 2014.



Your product contains batteries covered by the European Directive 2013/56/EU, and that can not be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environment and health. The battery is incorporated, to be disposed at the end of the useful life of the product, it can not be removed by the user. In this case, recycling or recovery centers handle the dismantling of the product and remove the battery.

**READ CAREFULLY AND KEEP THE INFORMATION FOR FUTURE REFERENCE**

Declaration of conformity Directive RED 2014/53/EU

The company FONEX SPA declares that the product T120 complies with the essential requirements of the RED 2014/53/EU.

The declaration of conformity in complete form is available at the headquarters of FONEX SPA via dell'Artigianato 2/4 - 12040 - Sant'Albano Stura (CN)