

INDEX

Safety	2
Install SIM card and battery	5
Charge the battery	7
Switch On	8
Make call	9
Answer/end a call	9
Volume Control	10
Messages	10
Address book	17
Camera	19
Multimedia	19
Media player	20
Alarm	20
Calculator	20
Calendar	21
Radio FM	21
Network services	22
File manager	23
Safety Settings	25
Maintenance	26

Safety

Carefully read the following safety precautions to avoid dangerous situations. Read the entire instruction manual to understand all the information in detail.



Turn phone off where prohibited

The use of mobile telephones could, in some situations, cause interference or danger. Comply with all the rules of restricted areas.



Safe driving

Comply with the national laws and regulations in this regard.



Interferences

Keep magnetic objects at an appropriate distance from the phone because the memory could be damaged.



Maintenance service

Only qualified technicians are authorized to install or repair your phone.



Battery, charger and other accessories

The battery, charger and other accessories, can only be replaced with components suitable for this model. Do not connect your phone to other devices that are not compatible. Charge the battery every three months if it is not used for a long time.



Keep the phone dry

This phone is not a waterproof model, please keep it dry.



Proteggere l'udito

When using earphones, it is recommended to listen to music at a moderate volume. Do not hold the device too close when using the speakers.

Safety Instructions

Keep the device away from metal objects and keep it at proper distance from the body.

Medical Devices

Wireless devices can cause interference with unprotected medical devices. If in doubt, contact the doctor or the manufacturer.

Pacemaker

Persons with pacemakers should follow these suggestions:

- Hold the phone at a safe distance from the pacemaker when the phone is turned on.
 - Use the phone on the opposite side to that in which the pacemaker is located in order to reduce interference.
- Turn the phone off immediately if it is assumed that there are interferences in the surrounding environment.

Emergency calls

The phone uses radio signals, mobile phone networks, landline networks, and user-programmed functions. It is therefore not possible to guarantee a connection at all times.

For this reason, do not rely solely on the phone to make important calls, such as medical emergencies.

This phone complies with international safety requirements for exposure to radio waves.

CAUTION: Lithium battery. Risk of explosion if the battery is replaced by an incorrect type.

 
Installing SIM card and battery

The SIM card is housed on the back of the phone.


1. Open the rear cover of the phone as shown in the illustration below.




2. If the battery is already installed, remove it.

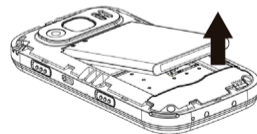

 
3. Insert the SIM card as shown in the illustration and make sure it is aligned correctly. Be careful not to scratch or bend the contacts.

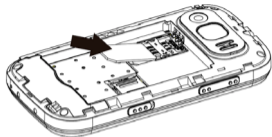

 4. Install the battery as shown in the following illustration. Make sure that the edge with the contacts is facing the SOS button.

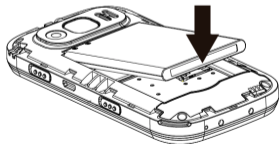

 5. Close the rear cover.

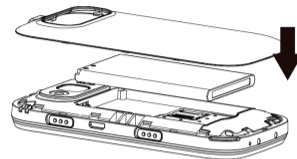

Charging the battery

Before using the phone for the first time, you must fully charge the battery. It can be charged using the battery charger or by connecting the phone to your computer via the USB cable.

Use the original charger. If necessary, contact a service center for the use of compatible accessories.

When the battery charge is low, the icon will appear empty. When the battery is dead, the device will automatically turn off.

If the battery is completely flat, the phone will not turn on although connected to the charger.

Caution: Do not remove the battery while it is charging, otherwise it will damage the device.

1) The phone will charge after being properly plugged into the charger and the battery icon will dynamically increase the charge level.

2) If the phone is off, the screen will show an animation of the charging process while in progress

When recharging is complete unplug the charger from the wall outlet and from the phone itself. The phone may be slightly warm.

Battery details

Battery	Duration in standby	Conversation time
Lithium ion battery	Approx. 5 days	Approx. 10 hours

- The battery will reach its maximum capacity after being recharged 2-3 times.
- While recharging, maintain the temperature between 0° C and 40° C..
- In time the battery will gradually wear out and therefore take longer to recharge. This is normal.
- Continuous recharging for a long time can damage the battery and the charger. For this reason it is necessary to disconnect the device when recharged.

Basic functions

Power ON/OFF

To turn on or turn off the phone press the red button. When turned on the following information may appear: SIM card lost or inserted incorrectly. SIM card is corrupted or invalid. If your SIM card is valid, but protected by a PIN, enter the code and press ok. Use the delete key to erase.

Warning

If an incorrect PIN code is entered various times, the display will show how many possibilities remain for entering the correct PIN code. Once you have exhausted the possibilities, the mobile phone informs the user that the SIM card is locked. Enter the PUK code to unblock it.

Take the following steps:

1. Enter your PUK code and confirm
2. Enter the new PIN code and confirm
3. Change language, time and date

The default language is set by the SIM card. Refer to the chapter with information on how to change the language, time and date.

Making a call

Phone main menu screen -> enter phone number -> press the green button to start the call.

The screen backlight turns off if, during the call, no action is taken for 5 seconds. By pressing the power button, the dial keys or buttons on the side, it will reactivate the screen backlight.

Answering/Terminating a Call

Answering a phone call

Press the green button to answer.

Terminating a call

Press the red button to terminate a call.

Volume

Call volume

Press the side button to adjust the volume.

Speed dialing

It is possible to set up to 8 buttons for quick contacts. Contact 1 and contact 2 are located in the main menu, therefore go directly to the last page to display contacts 3 to 8. After setting the quick contacts, it is possible to perform the following operations: following:

1. Insert pictures by taking photos
2. Insert pictures from the SD card
3. Call
4. Replace contact
5. View contact
6. Remove contact

To make a call, press the touch button that corresponds to the contact to be called.

SMS

- Creation: type the message.
- Add recipients: select the contacts from the address book or enter the phone number directly.
- Insert symbols: insert punctuation.
- Insert method: change input method.

- Insert templates: choosing among the various already preset
- Advanced
- Enter your phone number: allows you to enter the number of the contact from the phonebook to the message.
- Enter name: allows you to enter the name of the contact from the phonebook to the message.
- Save: allows you to save the message in drafts.

MMS

- Create: type the message.
- Add recipients: select the contacts from the address book of recipients or enter the phone number directly.
- Insert symbols: insert punctuation.
- Insert method: change input method.
- Insert templates: choosing between the various already preset.
- Add pictures: select the pictures and add to the MMS.
- Add music: Select music from your phone or SD card and add to the MMS.
- Add video: select the video from the phone or from the memory card and add it to the MMS.
- Add object: the user can edit an object and add it to the contents of the MMS.
- Insert templates: choose between the various already preset.
- Preview MMS: preview current MMS.
- Scroll options: set scroll forward or backward, and the running time.
- Advanced options
- Insert Attachments: insert attachments to MMS.
- Save: Save the MMS in the drafts folder

Incoming message

It is possible to view received messages in the incoming messages folder.

- Display: display the contents of the message.
- Reply with SMS: reply to messages received.
- Reply with MMS: reply to messages received in MMS.
- Call sender: call the sender.
- Forward: forward this message.
- Delete: delete current message.
- Delete all: delete all messages in the incoming messages folder.
- Save to address book: save phone number in address book or replace one.

Drafts

A message that has not yet been sent will be automatically saved in the Drafts folder. In this case it is possible to perform the following operations: view, send, edit, delete, and delete all.

Outgoing messages

If the message cannot be sent, it will be saved in the outgoing messages folder. In this case it is possible to perform the following operations: send, edit, delete, and delete all.

Sent messages

If the Save sent messages function is enabled in the SMS settings, sent messages will be automatically saved in this folder. In this case it is possible to perform the following operations: send, edit, delete, and delete all.

Cell broadcast messages

Cell broadcast is a network service that provides information such as weather forecasts and traffic to all GSM

users in specific areas.

- Receive mode: activate/deactivate cell broadcast.
- Channel Settings: The following operations may be performed (subscribe, unsubscribe, add, edit and delete).
- Language: select the language for the cell broadcast service.
- Read Messages: load cell broadcast messages received

Please note: The cell broadcast service requires the support of a provider. Ask your local provider for more detailed information.

Messages – SMS setup

SIM

- SIM
- Validity period: allows you to set the period of validity of the message.
- Message Type: allows you to set the method for sending the message.
- Sending report: activate/deactivate the message sending report.
- Reply route: activate/deactivate the message reply route.
- Memory status: displays the status of the phone memory and the SIM card.
- Text messages Counter: records the number of messages sent and received.
- Save sent message: to be activated to successfully save the sent message in the outgoing messages folder. Disable to delete the message.
- Preferred Storage: allows you to select whether to store on your phone or SIM card.

Message - MMS Settings

1. Data account: The data account is automatically recognized after inserting the SIM card.
2. Common settings:
 - Compose: set page time, edit mode, auto-signature switch and MMS signature.
 - Enter: send report, read report, priority, sending time, send and save.
 - Recovery: local area network, roaming network, filters, read report and send report.
 - Preferred Storage: allows you to choose whether to save on the phone or on the SIM card.
 - Memory status: displays the status of the phone and SIM card memory.

Support messages

- Enable button: select receive all or close.
- Load assistance: select reception mode.

Call Log

All calls	Display all calls
Lost calls	Calls lost
Calls made	Calls made
Calls received	Calls answered

Call settings

Calls waiting

Activate or deactivate Call Waiting, necessary for calls on hold and group calls. This function must be supported by the network.

Activate	Activates call waiting function
Deactivate	Deactivates the call waiting function
Request	Requests the status of waiting calls

Call transfer

This service requires the support of the network.

Transfer all	Transfer all incoming calls to the preset phone number.
Transfer if unreachable	When the network does not find your cell phone (switched off or outside serviced area) will transfer the call.
Transfer is there is no answer	When the phone does not answer a call, the system will automatically transfer it to the preset phone number.

Transfer if busy	When the line is busy, the system will transfer the call
Transfer all data calls	All GSM calls will be transferred to the preset phone number.
Delete all transferred calls	Delete all transfer functions.

Block calls

Block outgoing calls	Blocks all outgoing calls/international calls/international calls (without national calls)
Block incoming calls	Blocks incoming calls/calls in roaming.
Delete all	Deletes call call blocks
Change password	Change password to limit calls

Advance settings

Automatic redial	Enables/disables automatic redial
IP Typing	Sets IP type
Call time reminder	Sets call notification time none/one time/for a period
Answer Mode	Select by pressing any key to answer or respond automatically in headset mode

Phone Book

The phone has a phone book. Detailed information regarding contacts include: name, phone number, photo and sound for an incoming call. For contacts saved in the SIM card, only the name and phone number can be saved.

After entering a name in the phone book you can:

Quick Search

It is possible to search for a contact quickly by typing the characters or the number in the contact list.

Add a new contact

Change name and phone number to add a new contact in your phone or SIM card.

View

Allows you to view detailed information about the contact.

Send text message

Allows you to send a message to established recipients. Up to 20 contacts may be selected as recipients from the phone book.

Send MMS

Send MMS to selected recipients. Up to 20 contacts may be selected as recipients from the phone book.

Call

Select “Call” to make a call when the cursor points to one of the voices recorded.

Change

Change the information regarding the name and phone number of the contact.

Delete

Remove the record for the selected contact.

Copy

Copy the registration for a certain contact on the phone, the SIM card or in a file.

Groups: Add a new group to send SMS or MMS.

Groups: Add a new group to send SMS or MMS.

Phone book settings

Preferred storage: Select the preferred storage: SIM card, phone, or both.

Speed Dial: allows you to set speed dial numbers.

Special numbers: set other phone numbers. This feature must be supported by the SIM card.

Memory status: displays the status of the phone book memory.

Note: This phone can store 300 phone numbers.

Copy Contacts: allows you to copy the contacts on your phone or SIM card.

Move Contact: allows you to move the contacts on your phone or SIM card.

Delete all contacts: allows you to delete all the contacts on your phone or SIM card.

Music

- Play: If there are music files in the phone, they will be automatically played starting from the first.

- Details: Displays detailed information about the currently played track.
- Refresh List: updates the list of songs.
- Settings: Set your favorite playlist, repeat, random play (Shuffle) and background music, etc.

Camera

With this menu you can use the internal camera to take pictures or record videos and change the settings of the camera. The camera is located at the back of the phone. Use the screen as a viewer. The pictures generated by the phone are in JPG format. When there is no more storage space some files or photos must be deleted to acquire new space.

1. Photo: Display photos taken.
2. Camera settings: set shutter sound, EV, contrast, flicker, delay time, etc.
3. Image settings: set the size and quality of the image.
4. White balance: Auto, sunlight, tungsten lamp, fluorescent lamp, cloudy, incandescent light.
5. Scene modes: Auto mode/night mode
6. Effects settings: Sets normal, greyscale, sepia, green sepia, blue sepia and reverse colors.
7. Memory: select the memory in which to place the album to view the photos..

Gallery

View the pictures and set the mode to turn pages.

VideoCam

Click on the “VideoCam” icon to start recording a video. The duration depends on the time limit selected in the recording settings and the memory space available in the management file. The following options may be set:

1. Camcorder settings: EV, Night mode and Anti-Flicker.
2. Video Settings: Set video quality.
3. White balance: automatic, sunlight, tungsten lamp, fluorescent lamp, cloudy, incandescent light.
4. Effect settings: Set normal, greyscale, sepia, green sepia, blue sepia and color inversion.
5. Memory: select the memory in which to place the album to view the images.
6. Restore Defaults: Restores the default settings.

Video

Select the video file and play.

Reminder

Adds a reminder with the subject, priority, due date, etc. In some reminders you can set an alarm, view status and its details.

Calculator

It is possible to perform basic operations such as additions, subtractions, multiplications and divisions.

Alarm

The system includes 5 alarm options that are “off.” Either one or all can be activated depending on the need.

The alarm clock works as long as there is sufficient battery power.

- Change: activates/deactivates alarm
- Repeat: Sets interval
- Alarm Time: Sets the alarm time
- Alarm Ringtone: allows you to choose your favorite sound as a ringtone for the alarm.
- Notification type: Select the type of alarm signal.

Calendar

Activate the calendar menu, press the icon to the left/right to move to the previous/next month and press the volume key up or down to display the previous/next month. Select the option to activate the submenu.

- View: display events for the current day
- View all: display all events
- Add event: Adds new information
- Delete event: Deletes all events.
- Date set: allows you to go to a set date.
- Go to today: allows you to return to today's date.

Flashlight

Press the side button of the flashlight to turn on/off the flashlight itself, or enter the main menu, option torch and turn on/off the flashlight.

FM radio

- You can answer calls while listening to the FM radio. At that moment the radio will automatically switch to silent mode. The FM radio can be disturbed when other users send file through GPRS or CSD.
- Type on the corresponding icon to perform operations such as move to previous/next channel, pause and replay (play).
- Channel list: Up to 30 radio stations can be saved and changed.
- Manual input: It is possible to search for FM radio stations. The radio frequencies extend from 87.5 Hz to 108 Hz.

Recorder

- New registration: create a new recording.
- List: Displays the established recordings. It allows you to perform operations like play, rename, delete, delete all files, use as ringtone for incoming calls and send.
- Setting to select the memory (phone or SD card)
- Audio Quality: It is possible to select the recording quality.

Internet

- Home page: Open the home page. If you have not entered any settings, the home page will be the default site.
- Bookmark: performs operations such as enter, view, add new bookmark, set as home page, memory status.
- Enter website: any address can be added.
- History: This list keeps track of all the sites visited previously.
- Settings: set the settings for the navigation site.

Home page: default web site

Account data: sets pre-determined account data.

Navigation Settings: Allows you to clear cache, cookies and authorized information.

Preference settings: waiting time, display images and cookies switching.

Security Settings: Allows you to view or delete certificates.

Tools

File management

Allows you to view all the files in the phone / memory card.

Open	Open the selected file folder
New file folder	Create a subfolder inside the folder of file selected
Rename	Rename the selected folder
Delete	Allows you to delete the selected folder
Display	You can set the display according to the name, type, time and size

Formatting: Formatting erases all data and folders in the phone and memory card. Folders containing audio files and image files will be created automatically. Folders containing photo files will be created after the first photo is taken.

Bluetooth

Bluetooth devices (Bluetooth headsets, telephone devices for cars, computers or PDA) can be connected to use functions such as voice calls, data exchange and synchronization. The functions are as follows:

- Enable/disable Bluetooth: Activate/deactivate the Bluetooth function.
- Device visibility: invisible/visible.
- Search associated devices: displays current Bluetooth device and the devices that are already connected.
- Device name: changes the name of the Bluetooth device.

Phone Settings

- Time and date
- Time: set the current time
- Date: Set the current date
- Daylight Saving Time: This function sets daylight saving time
- Update the time depending on the time zone: activate/deactivate the update time function depending on the time zone.
- Schedule power on/off:
 - set the time to turn the phone on/off.
- Language: Set the display of menu languages.
- Preferred Input method.: Set predictive text
- Screen: sets background, screen lock, screen power on/off, etc.
- Airplane mode: to select airplane mode
- Set handwriting: Set pen speed, pen color.
- Miscellaneous Settings: to set LCD backlight, SW version and and image quality.

Security setup

SIM card security settings

SIM card PIN1 Code: enter SIM PIN. If the PIN input is activated, the screen will display “Enter PIN” when turned on. The password will be hidden by “*”.

SIM card PIN2 Code: the PIN needed for some special functions (such as network call charge).

SIM card PUK and PUK2 code (8 characters).

The PUK code is required to change the PIN code when the SIM card is blocked.

Phone security settings: enable / disable the phone lock. The phone lock is a 4 to 8 character password and its default code is “1122” until you change it.

Settings for recovery

To reset the phone use the default password “1122”

Profiles

Normal

Enable/Disable: to activate/deactivate the mode

Change: to customize the mode.

Normal:

- Mode: select a type of mode from: ringtone, vibration, vibration and ring or ring after vibration.
- Type of repeat: repeat/repeat once.
- Incoming Call: To change the ringtone of an incoming call.
- Ring volume: Adjust the volume of incoming calls.
- Message: change the ring tone for messages.

- Message volume: Adjust the volume of incoming message.
- Keyboard: to select the tone of the key.
- Key pressure volume: adjusts the volume of the touch.
- Power on: Sets startup ring tone.
- Power off: Sets shutdown ring tone.
- System notification: Sets the notification tone of certain items such as alarm, error, network sound or call connection sound.

Altre modalità:

Silenzioso

Meeting

Esterno

Personalizzato

SOS settings

- SOS Switch: activates/deactivates the emergency button.
- Set phone number: allows you to set 5 emergency phone numbers.
- SMS Settings: To activate and modify the contents of the SMS.
- Help: Displays information regarding the SOS functions.

Warnings

Make sure the phone is not exposed to humidity. Liquids can cause erosion of the circuit. If your phone gets wet, remove the battery first, then wipe the phone and replace the battery.

- Do not leave the phone in dusty or dirty environments, to avoid damaging components.
- Do not expose your phone to high temperatures. High temperatures may damage the battery and

warp plastic parts.

- Keep the phone away from low temperature areas.

The circuit can be damaged by strong fluctuations in temperature.

- Please use the phone in accordance with the requirements stated in the user manual.
- Avoid dropping, hitting and shaking the phone.
- Do not use liquids or wet cloths with strong detergents to clean the phone.

If failure occurs, contact your service representative.

Call volume

No sound

Check that the “Silent” option is not active.

Check that call transfer is not active.



MANUFACTURER'S LIMITED WARRANTY

This warranty does not limit the rights granted to consumers by specific national rules on consumer goods. The period of time during which this warranty is valid is limited to 24 months starting from the first date of purchase of the product. If it is used for professional purposes, the period is reduced to 12 months. During the warranty period, the national distributor Easyteck indicated at the bottom of this certificate, will, at its own expense and within a reasonable time, remove any interferences that may be encountered, and caused by manufacturing defects. Except as required by applicable law, the defects found by assistance personnel will be resolved by repair or, at the discretion Easyteck, through the replacement of the Product.

This limited warranty is only valid in the European country for which the product is intended and is the sole responsibility of the national distributor of reference for that country and which is identified in the bottom of the certificate. Some limitations in assistance services covered by this warranty may arise from the presence of specific components for a country.

Warranty referred to accessories and spare parts contained in the package

The package for the product covered by this warranty may contain accessories or spare parts that have a different warranty period since they are consumables, the warranty periods are summarized as follows:

- 24 months for cell phones
- 12 months for non-consumable accessories
- 6 months for batteries, headsets, memory cards or other.

The following are not covered by the warranty:

- The manuals and/or packaging
- User contents, configurations downloaded into the product or third party software
- Costs related to shipping the product to and from an authorized service center
- Deterioration caused by normal wear and tear including batteries
- Breakage due to accidental causes or inexperience and all damages caused by any external agent.
- Damage caused by improper use as described in the manual supplied with the product.
- All failures caused by use of non-original accessories, by viruses, or by connections to computers and networks.
- All defects caused by exposure to moisture and/or steam, from use under extreme thermal or environmental conditions or in the presence of corrosion, oxidation, food, liquid or chemical spills.

Limits of Liability:

The SIM card that is required to use the phone is provided by the phone operator and is therefore excluded from the warranty.

- This warranty is the protection given to the consumer by Easyteck through the reference dealer and is not intended to limit guarantees to the consumer which the retailer must ensure in accordance with the laws of the different countries.
- This warranty will be honored only and exclusively at authorized service centers or at retailers that are responsible for selling Easyteck brand products.
- The terms of the Guarantee shall not be extended under any circumstances and will be effective only from the date the product is first sold to the final consumer, as certified by a valid receipt.
- The faulty parts replaced during repairs under warranty are the sole property of Easyteck and cannot be demanded by the consumer in any way.
- To the extent permitted by applicable law and in the absence of fraud, no liability is attributable to Easyteck for damages due to loss of user data caused by any defect covered by the warranty.

-The consumer, to be able to obtain the repair, must always deliver the product to the authorized service center at his own expense, devoid of any lock or security code that limits or prevents use.

-Loss of profit, losses caused by non-use of the product or loss of revenues for any direct, indirect, special or consequential damages are also excluded from the liability.

-The responsibility of Easyteck is always limited to the purchase value of the product and the consumer is always responsible for keeping a copy of the personal data and software stored in the phone's memory.

-For faults which, for the reasons listed above, are not attributable to the terms of this warranty the consumer who does not want to have the repair carried out, will be required to pay the corresponding amount requested by the service center. Easyteck shall in no way be held responsible for this request because it is not under warranty.

CAUTION: The warranty is not valid if any attempts have been made to open or tamper with the product, including remove and/or obliterate labels and/or the IMEI code of the product.

Product sold in the European community
Manufactured by Fonex S.p.A.
via dell'artigianato 2/4 Sant'Albano Stura (CN)
MADE IN CHINA

C € 0700

stamp and signature of dealer

Date purchased



to avoid possible hearing damage, limit the amount of time listening at high volumes



INFORMATION FOR USERS

pursuant to Legislative Decree No. 49 of March 14, 2014

“Implementation of Directive 2012/19 / EU on Waste Electrical and Electronic Equipment (WEEE)”

This wheeled bin symbol on the product indicates that at the end of its life must be collected separately from other waste. The user must, therefore, take the remote control integrates the essential components that got to its life to the appropriate differentiated collection centers for electronic and electro-technical waste, or return it to the dealer when purchasing a new appliance of equivalent type, in terms of one to one, or one to zero for equipment having longer side of less than 25 cm. Appropriate separate collection for the decommissioned equipment for recycling, processing and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. Illegal dumping of the product by the user entails the application of administrative sanctions stated in Legislative Decree n. Legislative Decree No. 49 of March 14, 2014.



Your product contains batteries covered by the European Directive 2013/56/EU, and that can not be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environment and health. The battery is incorporated, to be disposed at the end of the useful life of the product, it can not be removed by the user. In this case, recycling or recovery centers handle the dismantling of the product and remove the battery.

READ CAREFULLY AND KEEP THE INFORMATION FOR FUTURE REFERENCE

Declaration of conformity Directive RED 2014/53/EU

The company FONEX SPA declares that the product T900 complies with the essential requirements of the RED 2014/53/EU.

The declaration of conformity in complete form is available at the headquarters of FONEX SPA via dell'Artigianato 2/4 - 12040 - Sant'Albano Stura (CN)