 


Installing the SIM card and battery

Installation of SIM1 and SIM2. Upon activation of cellular service, the operator chosen will provide a SIM card that contains the information network and the phone number assigned. Ask the gold contacts of the SIM to the bottom of the phone and push the SIM slot. In case of loss of a SIM to communicate as soon as possible to the operator.

Warning: Do not distort or scratch the SIM card and prevent it from coming into contact with static electricity, dust or moisture. The SIM card is a small object, it must be kept out of reach of children and pets.

The mobile phone must always use original batteries and accessories.

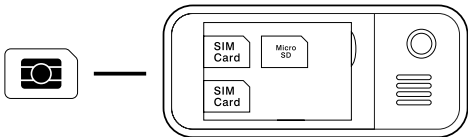

Function keys

Middle button and navigation buttons: allow the selection and navigation within the menus. By selecting “Shortcuts” menu settings phone can be associated with some features in order to select more quickly.

Function keys on the left and right: the lower turn on / off the phone and send or receive calls those above are managed by the software and allow selections described at the bottom of the corresponding display.

Icons indicating activity SIM1 and SIM2 display indicates the presence or absence of the SIM into their slots.

* Key: allows you to lock / unlock the keypad.

Key: long press this button will engage the mute function.

Call settings

Network selection / Call Forward / Call Waiting / Call barring / Hide / display your number (ID) / Other.

Phone settings

Date and time / Language setting / Settings shortcuts / Programming
Switching-off / Factory Reset.

PASSWORD Preset: 1234

Display

 
Setting backgrounds / Adjusting Display Brightness / Contrast / Backlight /
Keylock.

Safety


PIN / Change PIN2 / Phone lock / Change Password / Privacy / Screen Lock /
Lock assisted / Call authorized / Unwanted Numbers / Numbers authorized.

Music player


Insert micro SD card into adapter (not included)




insert adapter into computer

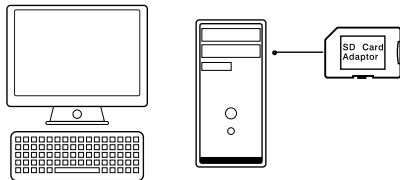 

Copy and transfer music files

 

Insert micro SD card into phone

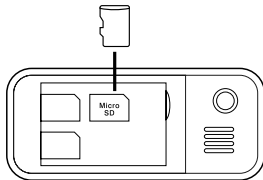 

Enjoy in audio player



MANUFACTURER'S LIMITED WARRANTY

This warranty does not limit the rights granted to consumers by specific national rules on consumer goods. The period of time during which this warranty is valid is limited to 24 months starting from the first date of purchase of the product. If it is used for professional purposes, the period is reduced to 12 months. During the warranty period, the national distributor Easyteck indicated at the bottom of this certificate, will, at its own expense and within a reasonable time, remove any interferences that may be encountered, and caused by manufacturing defects. Except as required by applicable law, the defects found by assistance personnel will be resolved by repair or, at the discretion Easyteck, through the replacement of the Product.

This limited warranty is only valid in the European country for which the product is intended and is the sole responsibility of the national distributor of reference for that country and which is identified in the bottom of the certificate. Some limitations in assistance services covered by this warranty may arise from the presence of specific components for a country. Warranty referred to accessories and spare parts contained in the package

The package for the product covered by this warranty may contain accessories or spare parts that have a different warranty period since they are consumables, the warranty periods are summarized as follows:

- 24 months for cell phones
- 12 months for non-consumable accessories
- 6 months for batteries, headsets, memory cards or other.

The following are not covered by the warranty:

- The manuals and/or packaging
- User contents, configurations downloaded into the product or third party software
- Costs related to shipping the product to and from an authorized service center
- Deterioration caused by normal wear and tear including batteries
- Breakage due to accidental causes or inexperience and all damages caused by any external agent.
- Damage caused by improper use as described in the manual supplied with the product.
- All failures caused by use of non-original accessories, by viruses, or by connections to computers and networks.
- All defects caused by exposure to moisture and/or steam, from use under extreme thermal or environmental conditions or in the presence of corrosion, oxidation, food, liquid or chemical spills.

Limits of Liability:

The SIM card that is required to use the phone is provided by the phone operator and is therefore excluded from the warranty.

-This warranty is the protection given to the consumer by Easyteck through the reference dealer and is not intended to limit guarantees to the consumer which the retailer must ensure in accordance with the laws of the different countries.

-This warranty will be honored only and exclusively at authorized service centers or at retailers that are responsible for selling Easyteck brand products.

-The terms of the Guarantee shall not be extended under any circumstances and will be effective only from the date the product is first sold to the final consumer, as certified by a valid receipt.

-The faulty parts replaced during repairs under warranty are the sole property of Easyteck and cannot be demanded by the consumer in any way.

-To the extent permitted by applicable law and in the absence of fraud, no liability is attributable to Easyteck for damages due to loss of user data caused by any defect covered by the warranty.

-The consumer, to be able to obtain the repair, must always deliver the product to the authorized service center at his own expense, devoid of any lock or security code that limits or prevents use.

-Loss of profit, losses caused by non-use of the product or loss of revenues for any direct, indirect, special or consequential damages are also excluded from the liability.

-The responsibility of Easyteck is always limited to the purchase value of the product and the consumer is always responsible for keeping a copy of the personal data and software stored in the phone's memory.

-For faults which, for the reasons listed above, are not attributable to the terms of this warranty the consumer who does not want to have the repair carried out, will be required to pay the corresponding amount requested by the service center. Easyteck shall in no way be held responsible for this request because it is not under warranty.

CAUTION: The warranty is not valid if any attempts have been made to open or tamper with the product, including remove and/or obliterate labels and/or the IMEI code of the product.

Distributor for Italy:

Fonex S.p.A. via dell'Artigianato 2/4 – 12040 – Sant'Albano Stura (CN)

Stamp and signature of dealer

Date of purchase

CE **0700**



CORRECT DISPOSAL OF THE PRODUCT INFORMATION FOR USERS

pursuant to Article 13 of the Legislative Decree of 25 July 2005, No. 151 "Implementation of Directives 2002/95/EC, Directive 2002/96/EC and 2003/108/EC on restricting the use of hazardous substances in electrical and electronic equipment and the disposal of waste"

The symbol of the crossed-out dustbin shown on the equipment or on the packaging indicates that the product, at the end of its useful life, must be collected separately from other waste. The recycling of this equipment at the end of life is organized and managed by the manufacturer. The user who wishes to dispose of this equipment should contact the manufacturer and follow the system that it has adopted to allow for the separate collection of at end of life. Appropriate separate collection in order to send old equipment for compatible recycling, treatment and disposal helps to prevent potential negative effects on the environment and on health and promotes the reuse and/or recycling of the materials of which the equipment is composed. Illegal disposal of the product by the owner will result in the application of administrative penalties provided by law.



CORRECT DISPOSAL OF PRODUCT BATTERY

(Applicable in THE European Union and other European countries with separate battery collection systems)

The marking on the battery or on documentation or packaging indicates that the battery in this product should not be disposed of with other household waste at the end of the life cycle.

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead in quantities above the levels referred to in the EU Directive 2006/66.

If the battery is not properly disposed of, these substances can cause harm to human health or the environment.

Declaration of conformity

We hereby declare that the product BLACKY2 has been tested by PHOENIX TESTLAB and has passed the standards required by EMC 1999/5/EC for the following specification:

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013, EN 50332-1:2013, EN50332-2:2013, EN 62471:2008, EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013, EN 50360:2001/A1:2012, EN 62209-1:2006, EN 62209-2:2010, EN 50566:2013, EN 62479:2010, EN 62479:2010, EN 301 489-1 V1.9.2, EN 301 489-7 V1.3.1, EN 301 489-17 V2.2.1, EN 301 511 V9.0.2, EN 300 328 V1.9.1

Product sold in the European community